




# Urban Collection

## Urban Top Changer

### Assembly Instruction

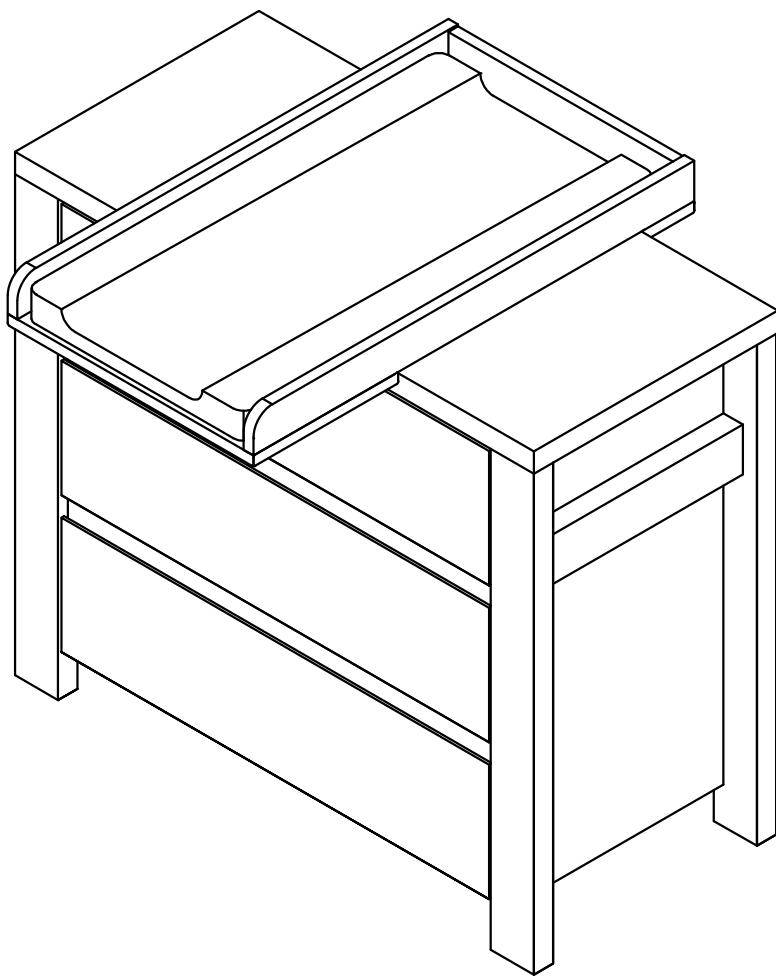

**Save the instructions for future reference**

Packaging and instructions printed on  
recycled materials

**SJC brands**

SJC Brands Pty Ltd abn. 58 106 988 578  
4-6 Merryvale Rd, Minto, NSW 2566  
t. 02 9603 5000 f. 02 9603 7000

e.customer.service@sjcbrands.com.au  
p.o. box 5878 MINTO DC, NSW 2566  
[www.tasmaneco.com.au](http://www.tasmaneco.com.au)

# Hardware List

Camlock x 2



Locking pin x 2



Screw M4 x 35mm x 13



 
 
Screw M4 x 16mm x 8



Allen key x 1



Metal Connector x 2



## Warning

Small parts can present choking hazard. Always keep small parts out of reach of children both during and after assembly. Store any spare or unused parts in a safe place.

## Assembly tips for hardware

We recommend tightening all screws and connectors by hand. If using a cordless driver, set the speed to a slow setting and the clutch to a low setting to prevent excessive tightening that may result in damage to your furniture.

Screws




## Recheck tightness


Re-tighten all connector bolts (at least two months after assembling the cot), as some connectors may loosen as the cot settles. Periodically check all of the connector screws, making sure they are tight.

# Parts checklist


Side Panel x 2

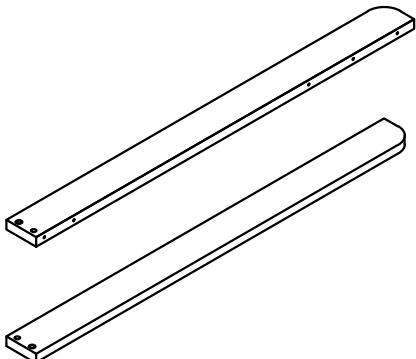


Back Panel x 1

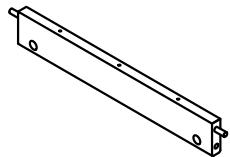


Rear Bottom Panel x 1

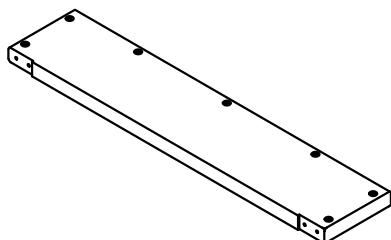


Front Bottom Panel x 1

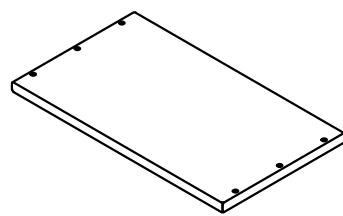


- 1 Fit locking pins to side panels.

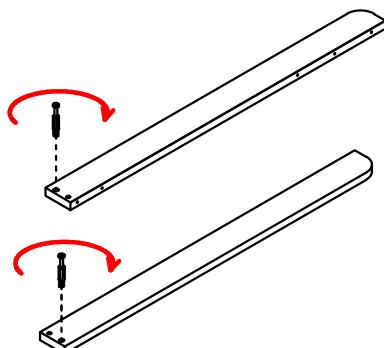

- 2 Attached the side panles to back panel  
secure with camlock

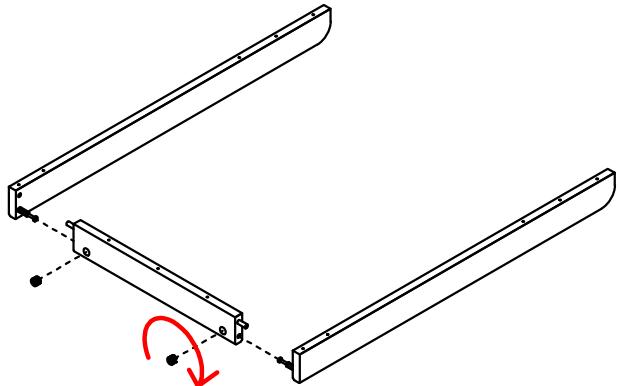


Locking pin x 2

 


Camlock x 2



- 
- 3** Fit metal connector to rear bottom panel secure with screws M4 x 16mm

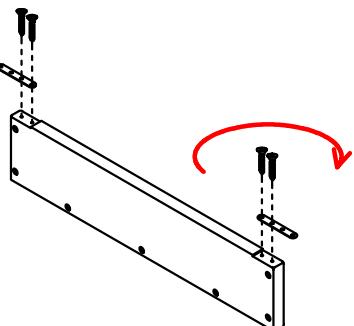

Metal connector x 2


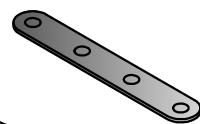


M4 x16mm Screw x 4



- 
- !** Attach rear bottom panel to side panels secure with screw M4 x 35mm.

**⚠** Ensure the screws are located in the correct pre-drilled holes as per the images.

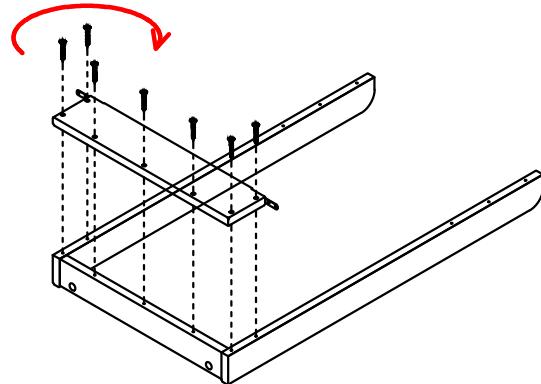
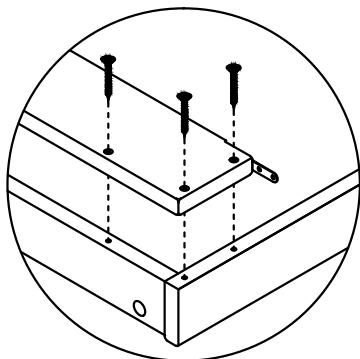


M4 x 35mm Screw x 7



- 
- 5** Attach front bottom panel to side panels secure with screw M4 x 35mm.

**⚠** Ensure the screws are located in the correct pre-drilled holes as per the images.

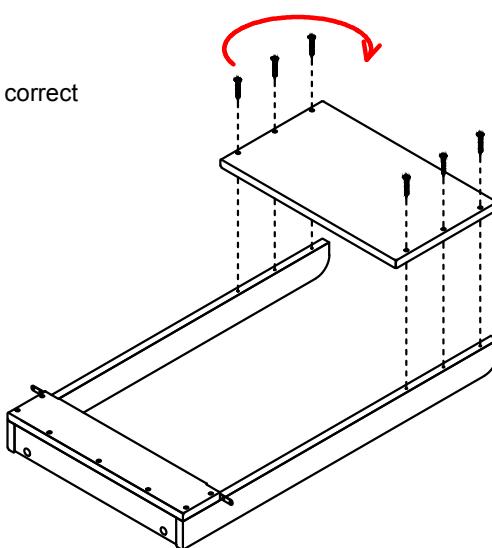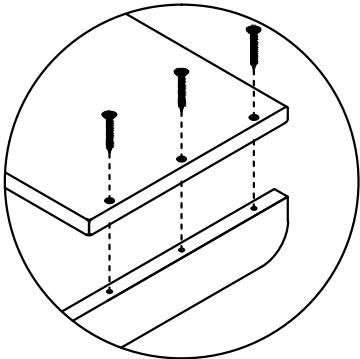


M4 x 35 Screw x 6




6

Attach the top changer to the back of chest top board secure with screw M4 x 16mm

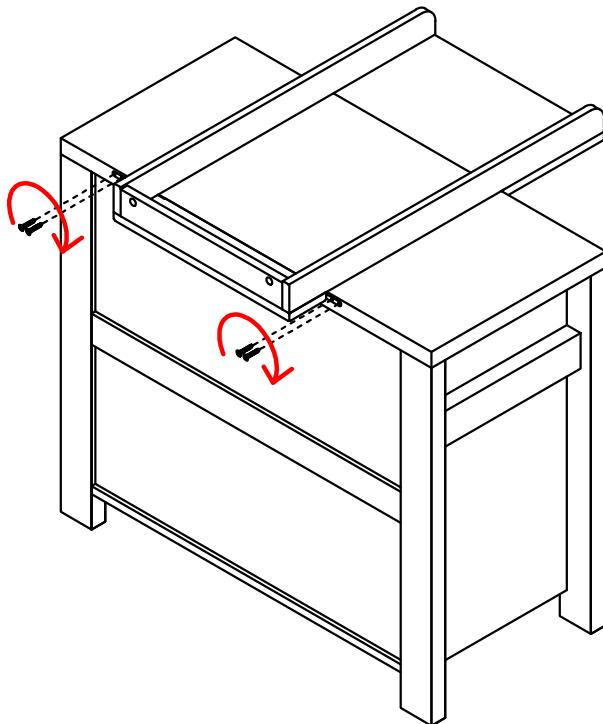

7

Insert the changer pad, the top changer is completed.

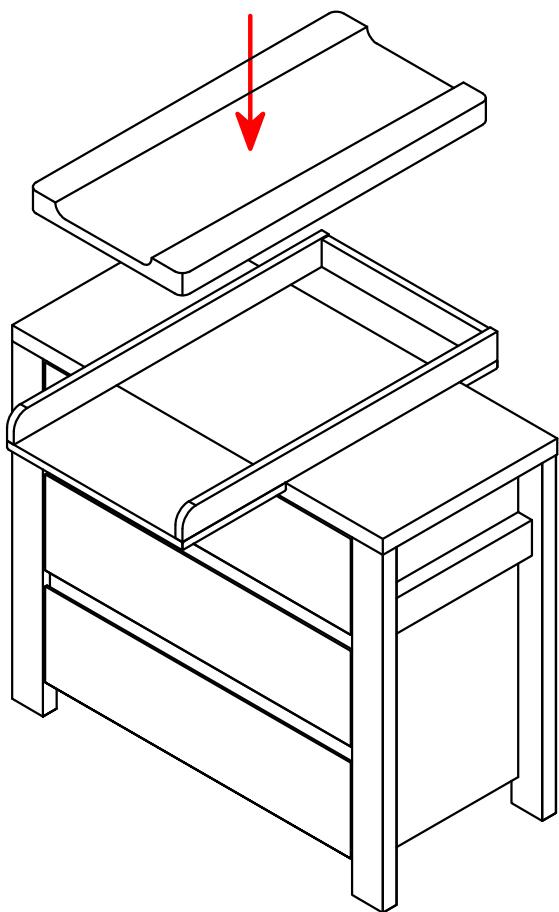



## Urban collection Guarantee

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The guarantee described below is in addition to the guarantee provided by law.

### **2 YEAR MATERIALS AND WORKMANSHIP GUARANTEE**

If within 2 years of the date of purchase of this product, there is found any defect in materials or workmanship of this product, SJC Brands Pty Ltd will replace the product free of charge, subject to the condition below:

The replacement product will be identical to the originally purchased product wherever possible, though in situations where the identical model is discontinued or out of stock, then SJC Brands Pty Ltd will replace the product with a model that is functionally equivalent.

This Guarantee is made to the purchaser and/or original owner only. For purposes of this Guarantee, the original owner is considered to be the person who first makes use of the product.

Note: In situations where a person purchases this product for the purpose of gifting to another, the recipient is considered to be the original owner.

### **CONDITIONS:**

The 2 Year Material and Workmanship Guarantee will be void and nullified in circumstances where:

1. The item is improperly assembled or adjusted and/or not assembled strictly in accordance with the written instructions provided by the seller in the box containing the item.
2. There is damage to the product and that damage is deemed by SJC Brands Pty Ltd to be caused by incorrect assembly, misuse or by use or storage outside of the physical or environmental specifications of the product.
3. There are modifications to the product or to parts of the product that were not authorized in writing by SJC Brands Pty Ltd.
4. The item is transferred, gifted or disposed of by the original owner to another.

### **WARRANTY CLAIM PROCEDURE:**

For warranty claims, please email us via our claims section on our website [www.tasmaneco.com.au](http://www.tasmaneco.com.au) or visit the store where the product was purchased.

The product must be returned to SJC Brands Pty Ltd or to the place of purchase with proof of purchase, including date and purchase price.

SJC Brands Pty Ltd

ABN. 58 106 988 578

4-6 Merryvale Rd , Minto , NSW 2566

PH: 02 9603 5000

FAX: 02 9603 7000

[www.tasmaneco.com.au](http://www.tasmaneco.com.au)

Email: [customer.service@sjcbrands.com.au](mailto:customer.service@sjcbrands.com.au)