

# Furniture Assembly Service

Would you like us to assemble your Tasman Eco furniture for you?

It's a great way to enjoy the benefits of your furniture with a minimum of fuss. And you know the assembly will be done right - in fact, we guarantee it. If there is any damage resulting from our assembly service - it's automatically our responsibility. Service is prompt, reliable, and friendly.

#### Booking

This service is available only in the Sydney metro area. For more information, including pricing, see our website www.tasmaneco. com.au. Or just call 02-9603-5000 during business hours to arrange a time and a day, so one of our assembly professionals can come to your home to assemble your newly purchased Tasman Eco furniture.





SJC Brands Pty Ltd abn. 58 106 988 578

4 - 6 Merryvale Road, Minto NSW Australia 2566

t. 02 9603 5000 f. 02 9603 7000 e. info@tasmaneco.com.au w. www.tasmaneco.com.au



## Bassinet **Assembly Instructions**








## Parts Checklist

#### End panels x 2



#### Allen Key x 1

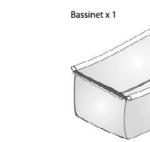

54mm bolts x 12



 
Upper and lower support bars x 4



Bassinet support rails x 2







Mattress x 1

Bassinet holding rods x 2



Ensure screws are firm but not overtightened. Check periodically.


Bassinet must be located on a level surface at all times.

Use the castor locks to prevent accidental movement.

Castors x 4



#### Important Note

 

# The Tasmaneco Guarantee

#### 100% Satisfaction Guarantee

If, within 3 months of the date of purchase of this product, the purchaser is not completely satisfied with this product for any reason, subject only to the conditions below, the purchaser can return the product to the place of purchase or to Tasman Eco Furniture Pty Ltd for a refund of the full purchase price of this product.

#### Conditions.

The 100% Satisfaction Guarantee is void and nullified in circumstances where:

- 1. There are modifications to the product or to parts of the product that were not authorised in writing by Tasman Eco Furniture Pty Ltd.
- 2. There is damage to the product and that damage is deemed by Tasman Eco Furniture Pty Ltd to be caused by incorrect assembly, misuse or by use or storage outside of the physical or environmental specifications of the product.

#### **5 Year Materials and Workmanship Guarantee**

If within 5 years of the date of purchase of this product, there is found any defect in materials or workmanship of this product, Tasman Eco Furniture Pty Ltd, will replace the product free of charge, subject to the conditions below. The replacement product will be identical to the originally purchased product wherever possible, though in situations where the identical model is discontinued or out of stock, then Tasman Eco Furniture Pty Ltd will replace the product with a model that is functionally equivalent.

This Guarantee is made to the purchaser and/or original owner only. For purposes of this Guarantee, the original owner is considered to be the person who first makes use of the product. Note: In situations where a person purchases this product for the purpose of gifting to another, the recipient is considered to be the original owner.

#### Conditions.

The '5 Year Materials and Workmanship Guarantee' will be void and nullified in circumstances where:

- 1. The item is improperly assembled or adjusted and or not assembled strictly in accordance with the written instructions provided by the seller in the box containing the item.
- 2. There is damage to the product and that damage is deemed by Tasman Eco Furniture Pty Ltd to be caused by incorrect assembly, misuse or by use or storage outside of the physical or environmental specifications of the product.
- 3. There are modifications to the product or to parts of the product that were not authorised in writing by Tasman Eco Furniture Pty Ltd.
- 4. The item is transferred, gifted or disposed of by the original owner to another.

#### **Registration and Claims**

To be eligible for the above Guarantees, the original owner must register their details online at www.tasmaneco.com.au immediately upon receipt of the product.

For claims under either the 100% Satisfaction Guarantee or the 5 year Materials and Workmanship Guarantee, please email us via our claims section on our website at www.tasmaneco.com.au or visit the store where the product was purchased.

The product must be returned to Tasman Eco Furniture Pty Ltd or to the place of purchase with proof of purchase, including date and purchase price.




Warnings:



#### Fit holding rods

Feed the holding rods into the bassinet loops. This will hold the bassinet securely into place.

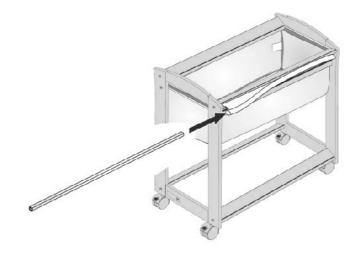




#### Fit the base and mattress

Place the firm base and mattress into the

Note: as you push down on the mattress you will hear the velcro on the ends of the bassinet stretching. This is normal. The velcro at the ends is only to keep the bassinet looking neat. The weight of the bassinet is held by the support rails and holding rods which are very

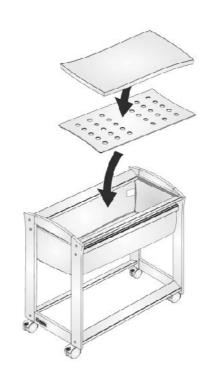

Your bassinet is now complete and ready to use.

Warnings: Ensure screws are firm but not overtightened. Check periodically. Bassinet must be located on a level surface at all times. Use the castor locks to prevent accidental movement.


#### **Important Note**

The maximum weight that the bassinet will carry is 9Kg. However, once your child has reached 4-6 months, he/she should be moved to a cot.




#### Prepare end panel


Start by placing one end panel on a clean, soft work surface. Make sure the panel faces the same way up as in the diagram.

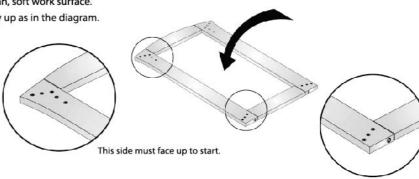

#### Assemble the support bars

Screw each support bar to the end panel. To assist in holding them into position, they have 2 wooden pegs at each end. The 4 bars are identical, but they must go on as shown. You may need to turn them upside down to ensure they go on the right way.

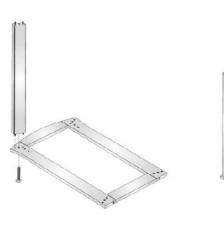

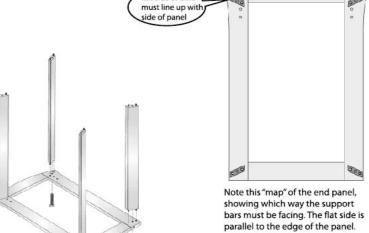

### Fit the bassinet support rails

Now screw on the two bassinet support rails.






### 4 Fit the remaining end panel

Put the second end panel into position, line up the holes, and fasten to the support bars and support rails.




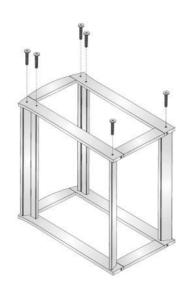

#### 5 Connect castor wheels

Push the castor wheels into the holes in the bottom of the rails. Ensure they click into place.



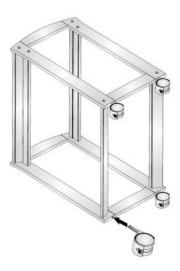


# Turn bassinet upright and lock castors Lock the castors by pushing the lever downwards.






#### 7 Prepare the bassinet


Prepare the bassinet for fitting to the frame. Note the location of the velcro strips on the bassinet and frame.

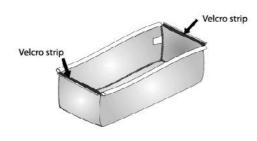


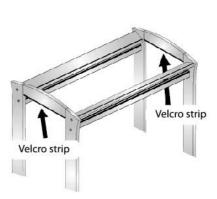

#### Fit the bassinet into the frame


Put the bassinet inside the frame. Use the velcro strips at the end to temporarily hold the bassinet in place.

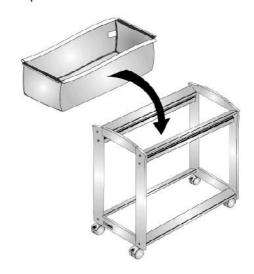

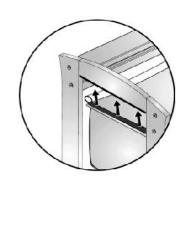

#### 9 Pull bassinet holding sleeves through top of frame

Feed the bassinet sleeves through the gap between the support bars. Ensure the loop is clear of the bassinet. This will allow you to insert the holding rods in the next step. You may need to loosen off the velcro for this step.

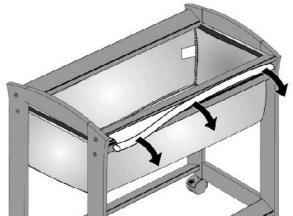



Pull the sleeves through until the loop is clear of the frame.