


tasman ECO

FURNITURE FOR LIFE

Bookleaf 3 Drawer Chest

Assembly Instruction

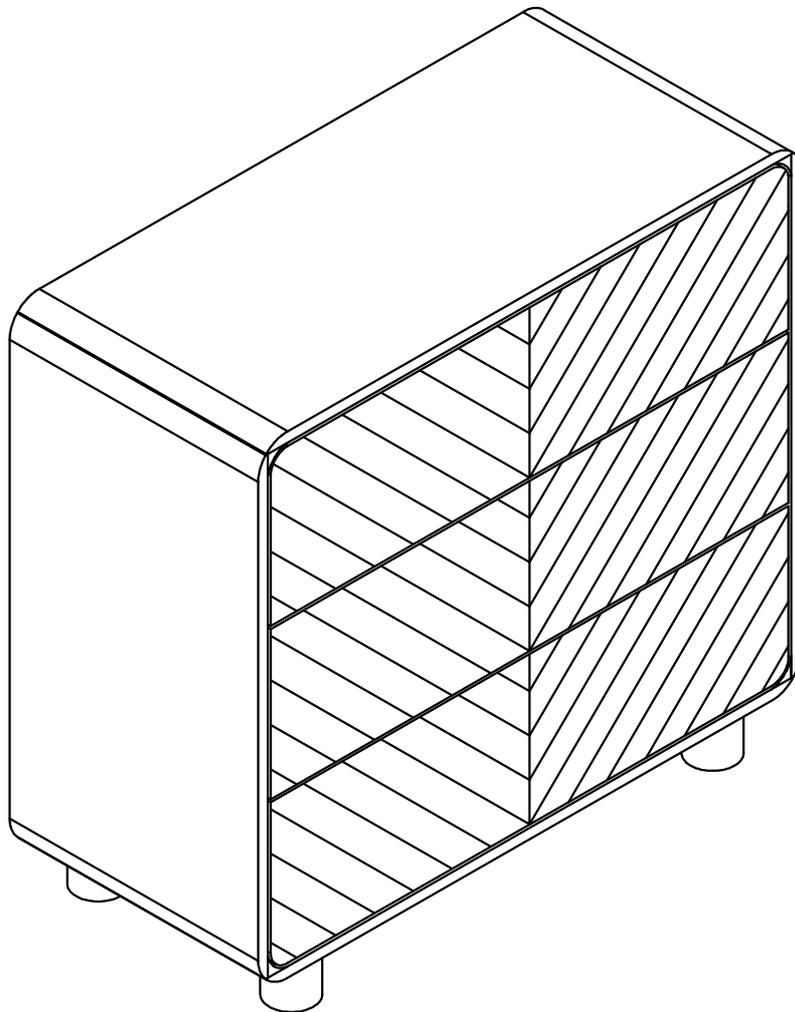

This product has been independently tested and complied with:
AS/NZS 4935:2009 Domestic furniture - Free standing chests of drawers, wardrobes
and bookshelves/ Bookcase Determination of stability & AS/NZS 8124.3:2012 + A1:2016
Migration of certain elements.



Packaging and instructions
printed on recycled materials

Tasman Eco Pty Ltd abn. 58 106 988 578 e. services@tasmaneco.com.au p.o.
4-6 Merr yvale Rd, Minto, NSW 2566 box 5878 Minto, DC, NSW 2566
t. 02 9603 5000 f. 02 9603 7000 www.tasmaneco.com.au

Save the instructions for future reference.
Assembly of this furniture is best undertaken by two people.

Hardware List

M6x35mm Bolt x 8



M6x50mm Bolt x 12



Locking pin x 44



Camlock x 44



Allen key x 1



M4x25mm Screw x 2



Wall strap x 1



To avoid damage the chest, please use provided allen key only when you are assembling.



Warning

Small parts can present choking hazard. Always keep small parts out of reach of children both during and after assembly. Store any spare or unused parts in a safe place.

Assembly tips for hardware

We recommend tightening all screws and connectors by hand. If using a cordless driver, set the speed to a slow setting and the clutch to a low setting to prevent excessive tightening that may result in damage to your furniture.

Screws




Recheck tightness


Re-tighten all connector bolts (at least two months after assembling the chest), as some connectors may loosen as the chest settles. Periodically check all of the connector screws making sure they are tight.

Parts checklist


Side panel x 2

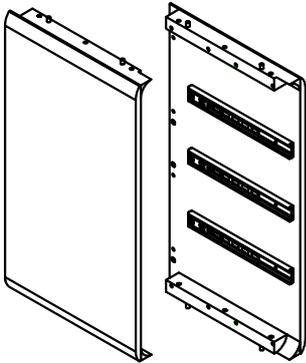


Bottom base x 1

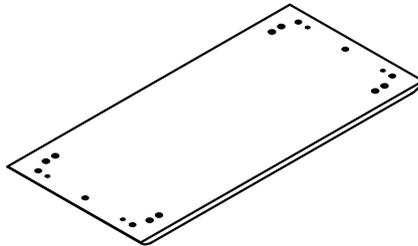


Top board x 1

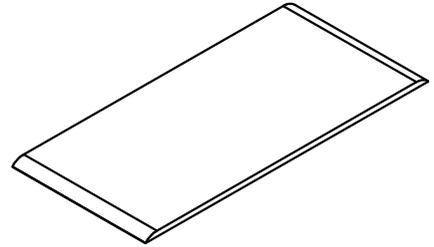


Chest frame back panel x 2

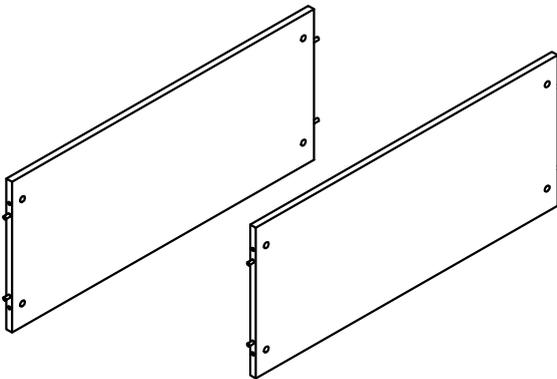


Drawer front panel x 3

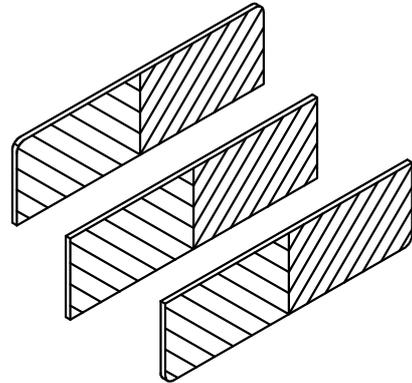


Drawer back panel x 3

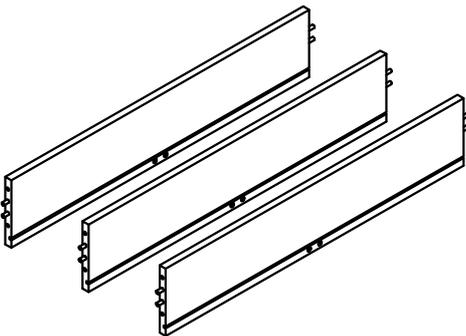


Drawer side panel (left) x 3

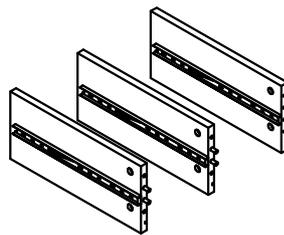


Drawer side panel (right) x 3

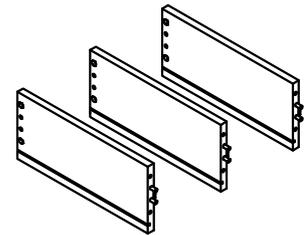

Drawer support panel x 3

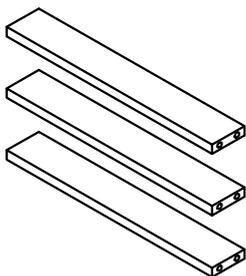

Drawer base panel x 3

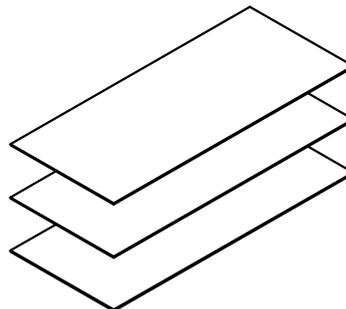


leg x4




1 Attach the legs on bottom base secure with M6x 35mm bolts.

M6x35mm Bolt x 8

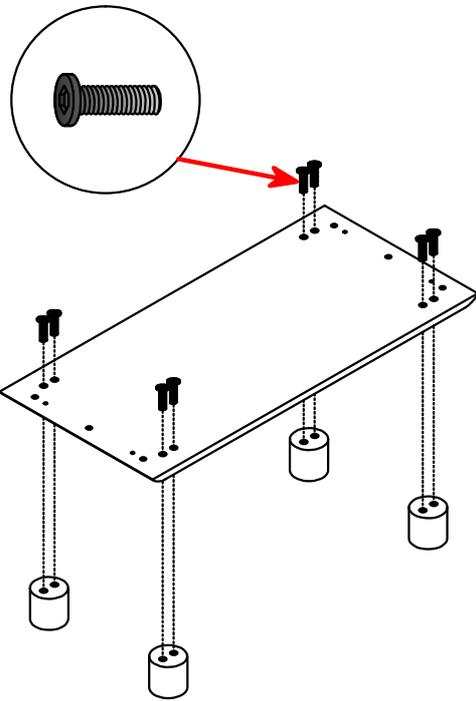


2 Fit locking pins to side panels.

Locking pin x 8

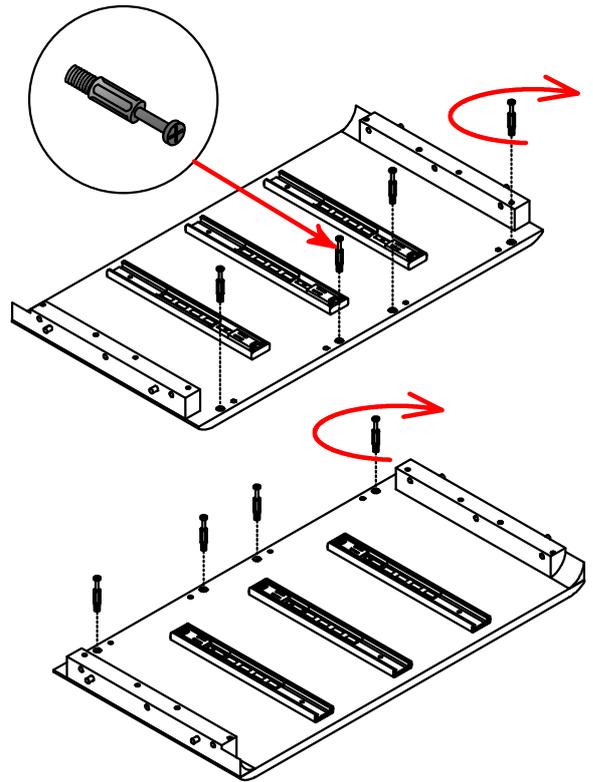



3 Insert the camlocks into chest frame back panel and attach the back panels to side panels secure with locking pins.

Camlock x 8

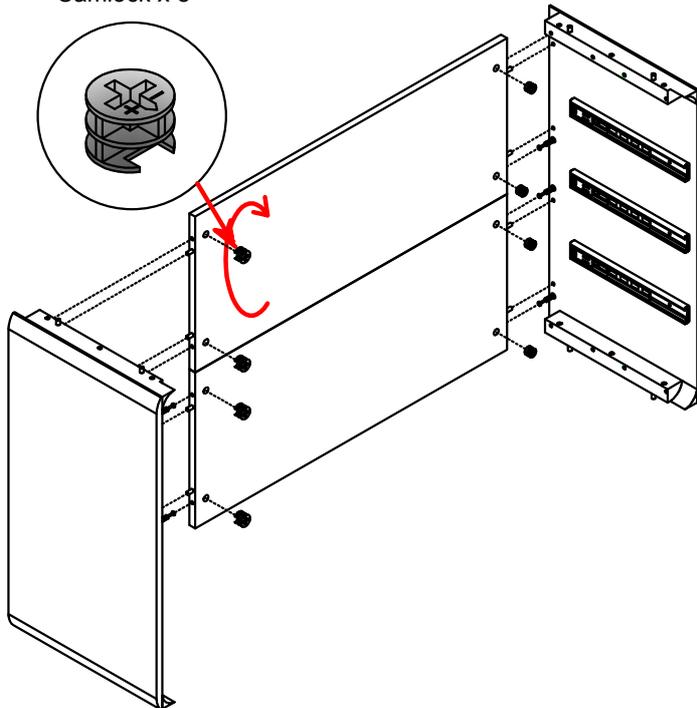



4 Fit the top board & Bottom base to chest frame secure with M6x50mm bolts.

 M6x50mm Bolt x 12

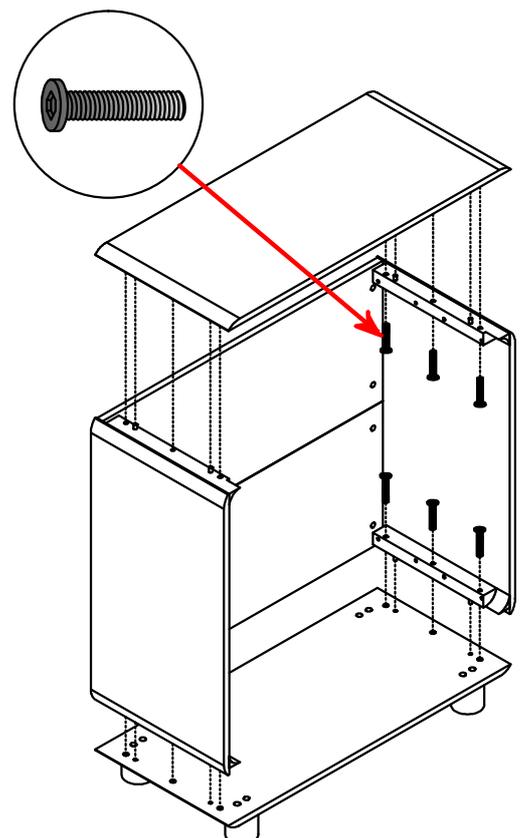

5


Tighten all bolts and screws by Allen key but do not over tighten.

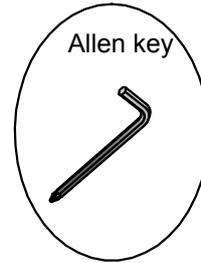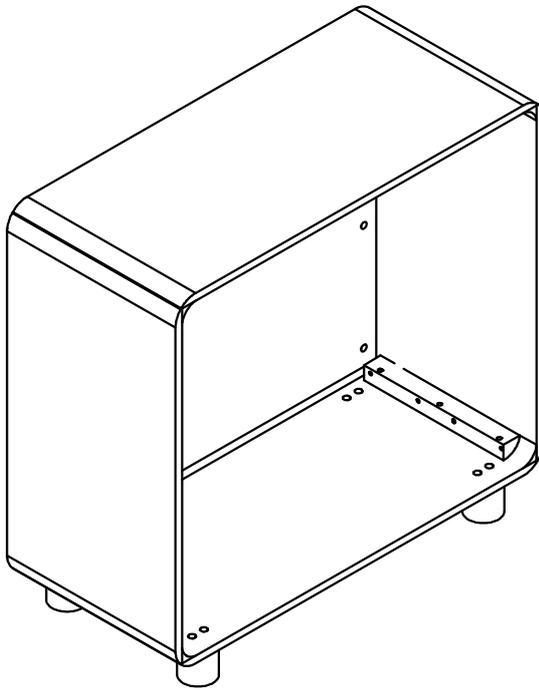


6

Fit locking pins to the drawer back panels as well as the drawer side panels as per attached pictures



Locking pin x 18

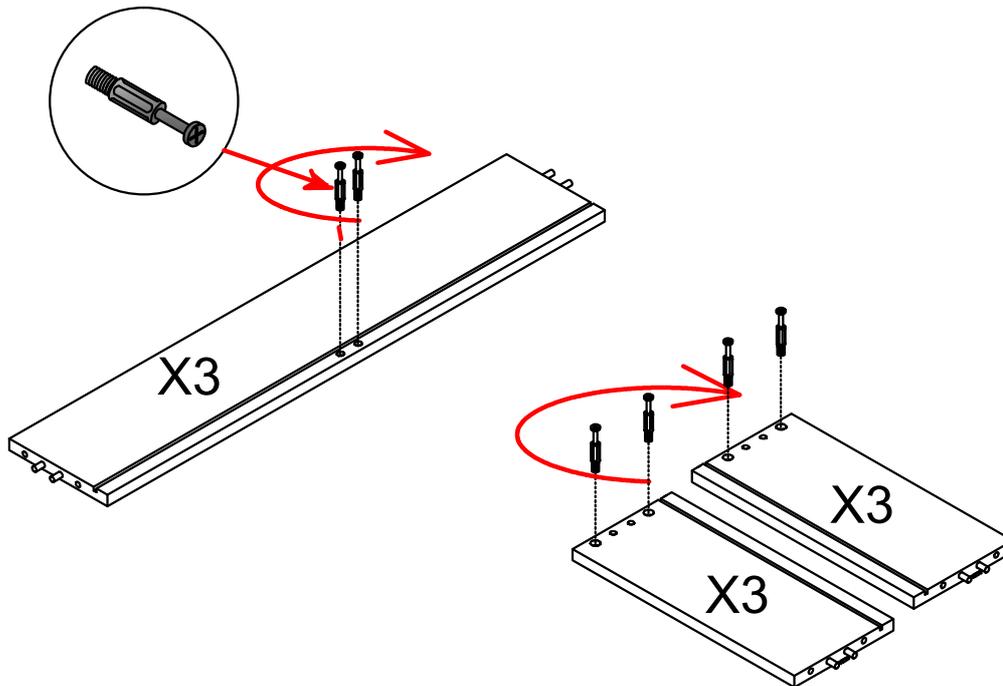


7 Fit side panels to drawer back panel secure with camlocks.

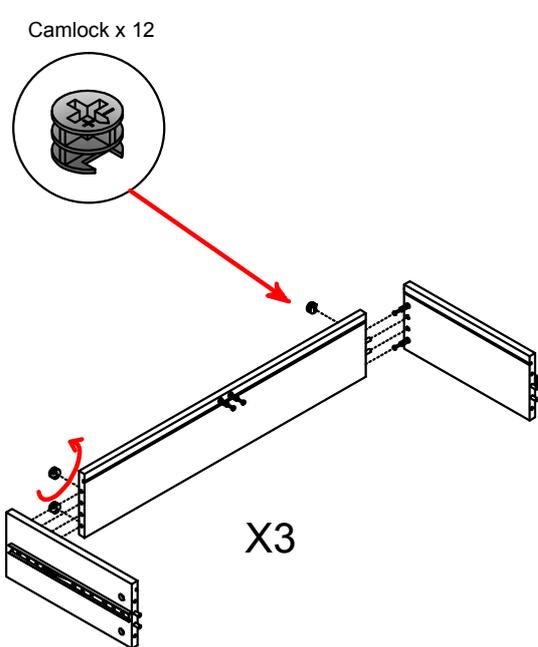

 
8 Fit the drawer support panels to the drawer back panel secure with camlocks.

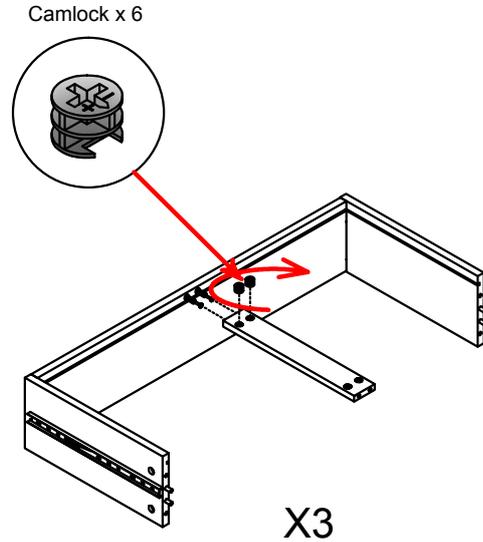


9 Insert base sliding into groves on side panels.

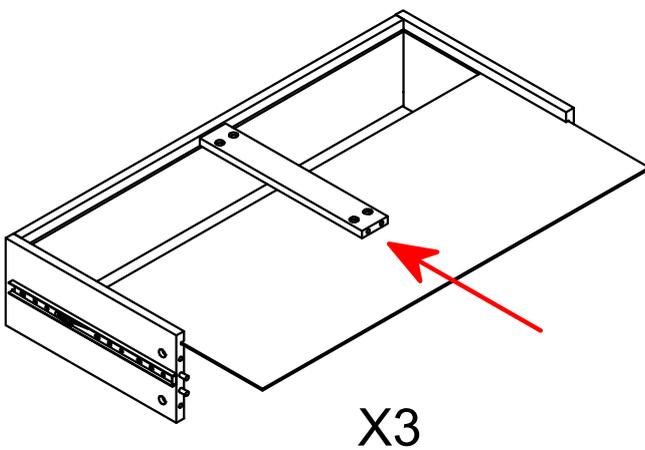


10 Fit locking pins into the drawer front panels.

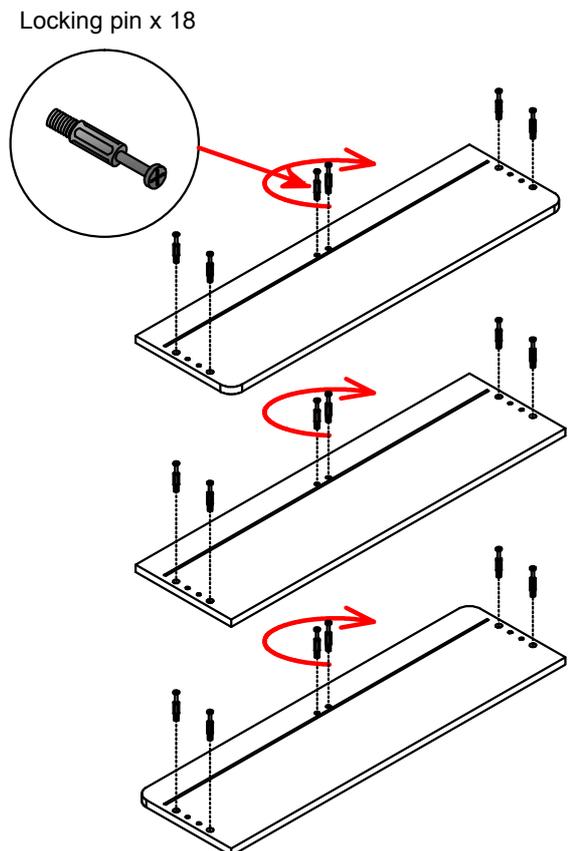

11 Fit side panels to the drawer front panels secure with camlocks.

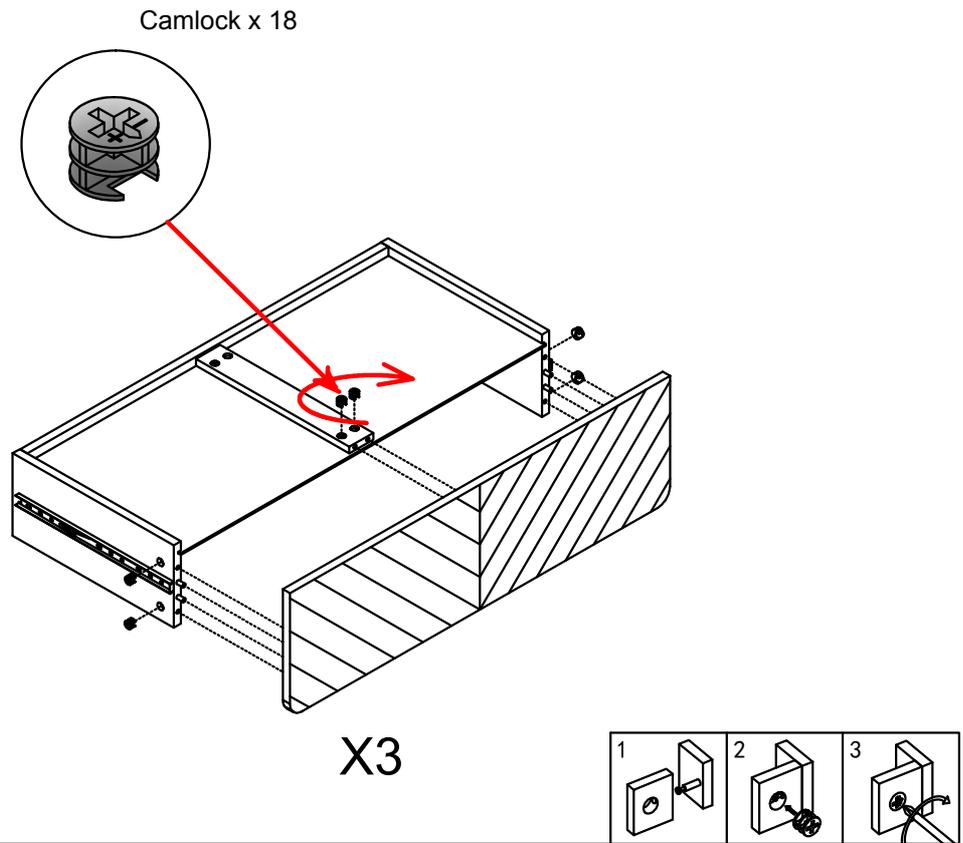


12 Insert the runner on drawers into runners fixed into frame of the chest once aligned push drawers in.

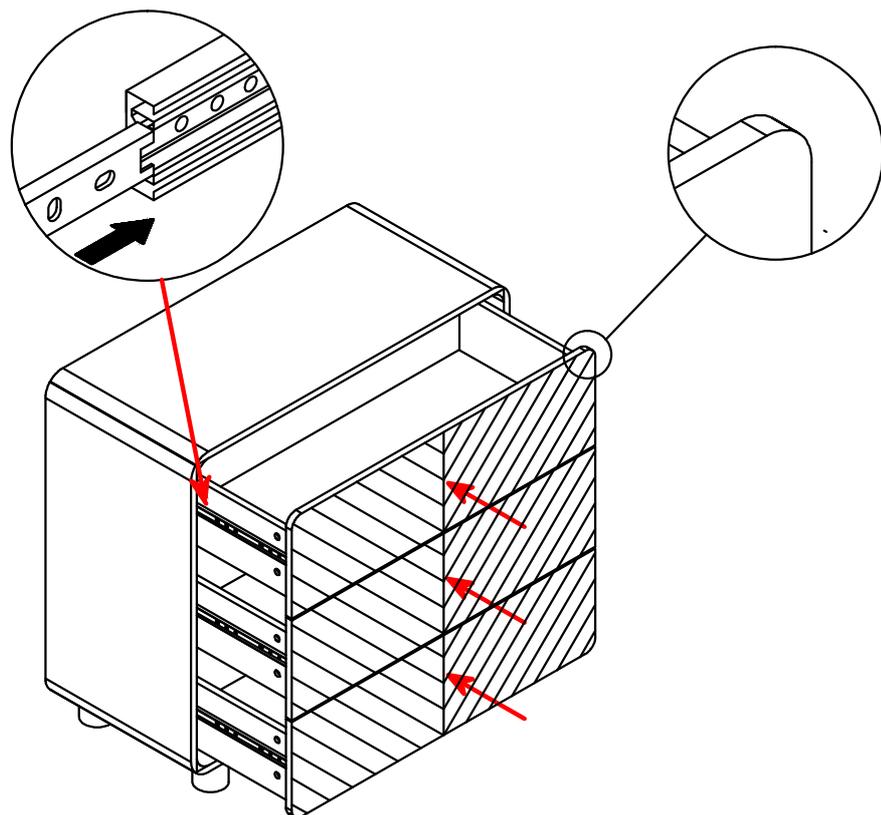


13

To open the drawers, push front panel in and the drawers will open, when closing, push front panel gently into the frame.

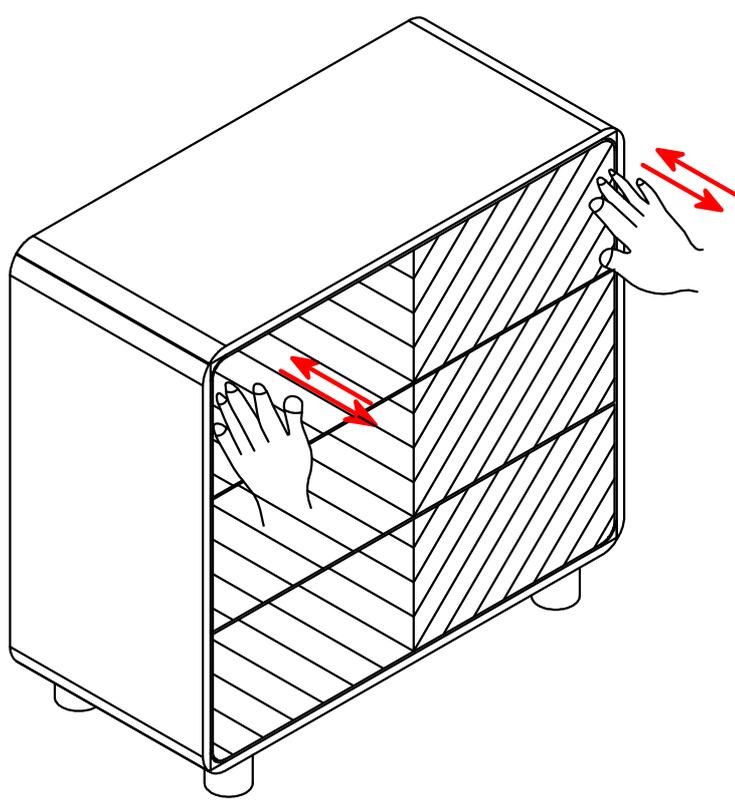

14

To remove the drawers, pull drawer fully out then on the inside of the runner push liver down on both sides hold down while pulling drawer out.

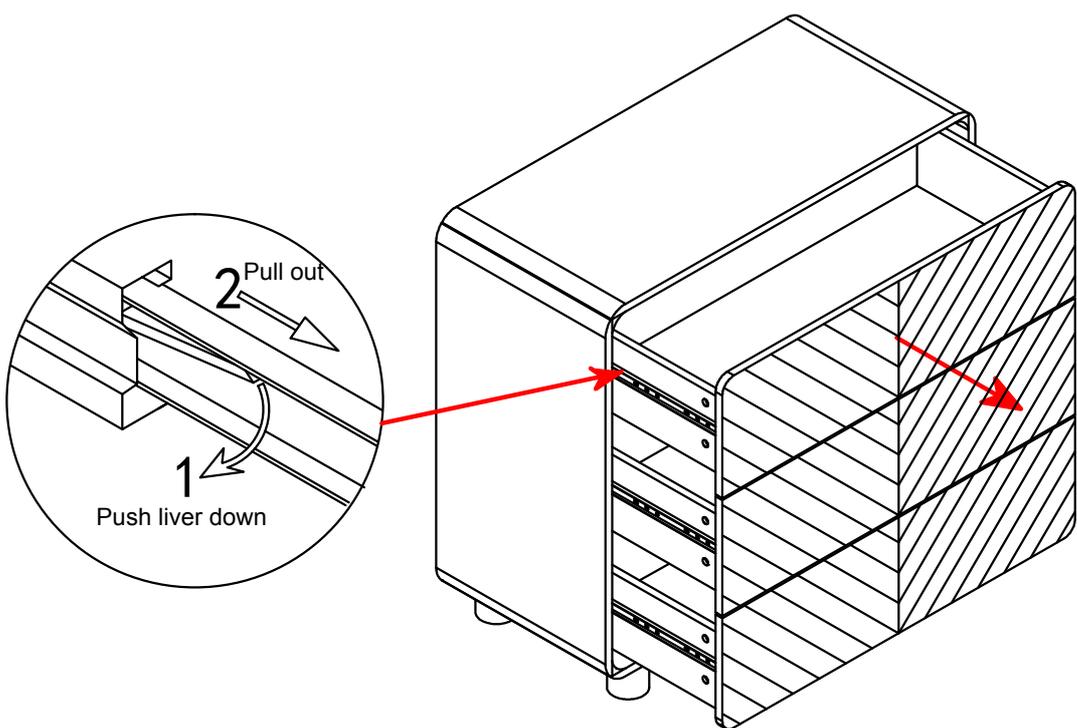


Instruction for Wall Strap installation

Hardware List


A.2 x Self tapping screw



 B.1xWall strap




Step 1- Screw the Wall Strap to back of the chest with Self tapping screws (Supplied)

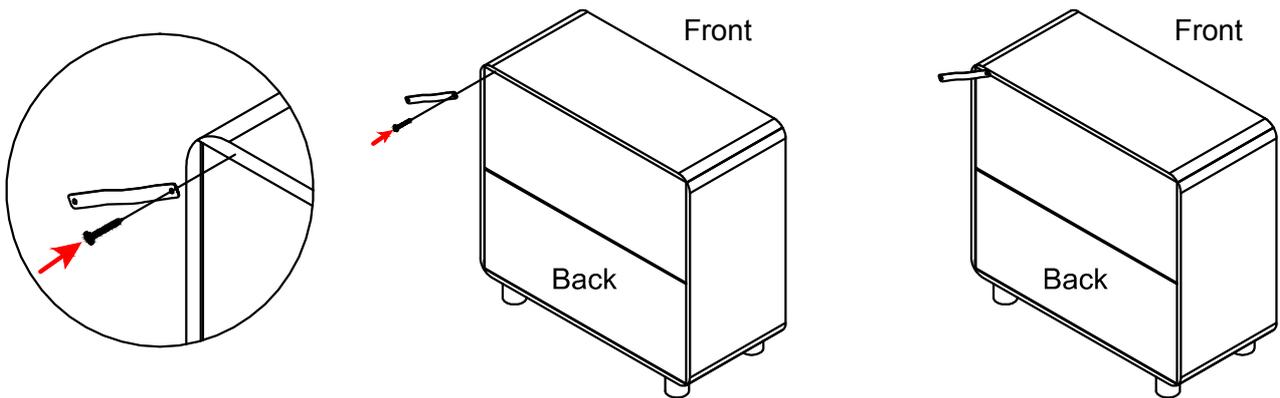

Step 2- Position the strap 100mm the left of its intended final position in order to give you room the screw the wall strap into the wall.
Please note: The wall fixing is not supplied, Please seek advice from your local hardware supplier to ensure you purchase the correct wall fixing.


Step 3- Ensure the wall strap is fixed into the wall securely.

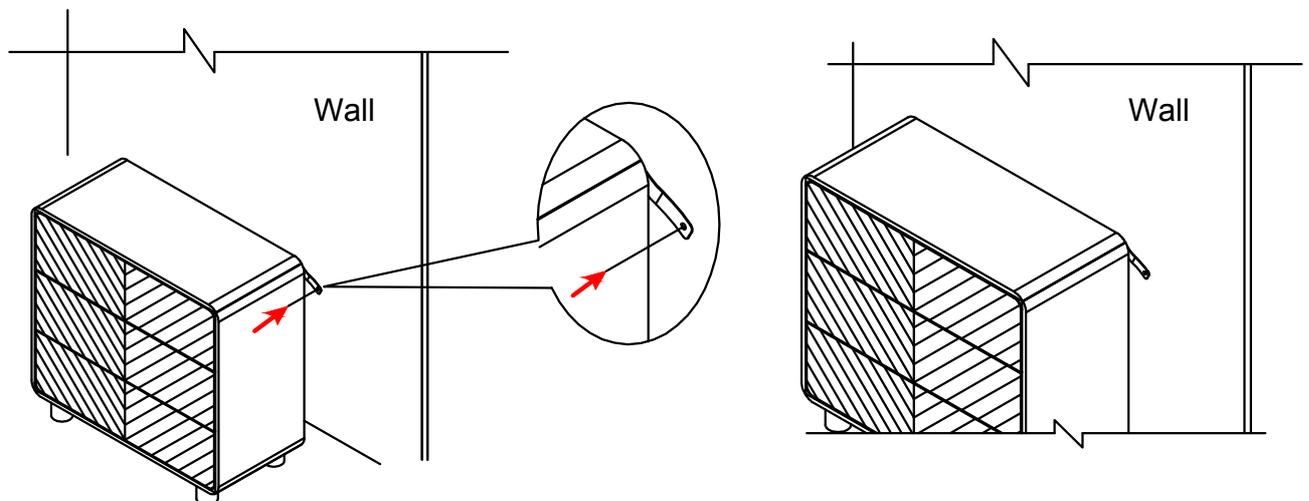


Step 2

Step 3

Step 4- Once you have completed step 3 then reposition the chest in its intended position (Two people maybe required for this step):

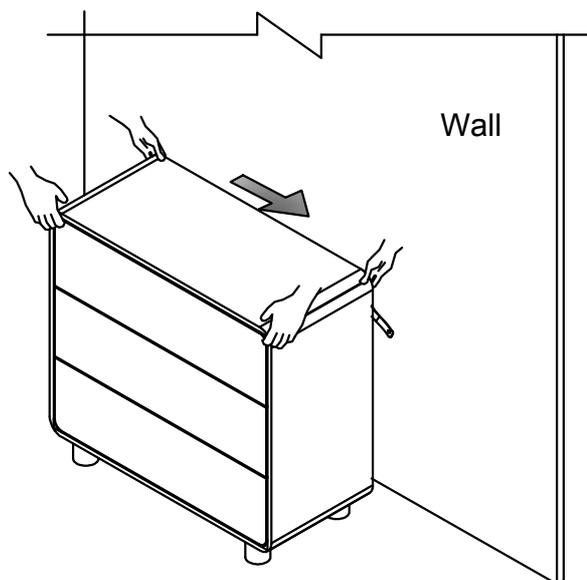

Step 5- The stallation of your wall strap is now completed

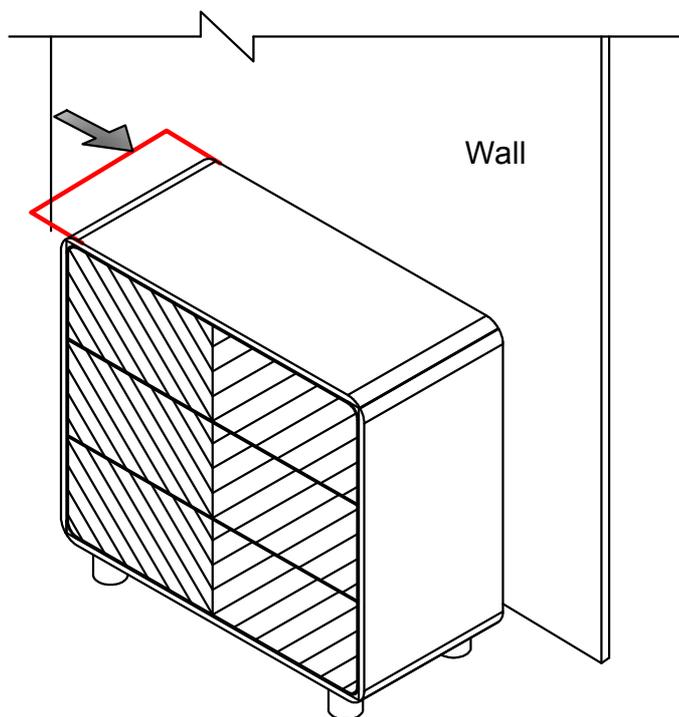

tasman ECO

FURNITURE FOR LIFE

Guarantee & Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The guarantee described below is in addition to the guarantee provided by law.

2 YEAR MATERIALS AND WORKMANSHIP GUARANTEE

If within 2 years of the date of purchase of this product, there is found any defect in materials or workmanship of this product, Tasman Eco Pty Ltd will replace the product free of charge, subject to the condition below:

The replacement product will be identical to the originally purchase product wherever possible, though in situations where the identical model is discontinued or out of stock, then Tasman Eco Pty Ltd will replace the product with a model that is functionally equivalent

This Guarantee is made to the purchaser and/or original owner only. For purposes of this Guarantee, the original owner is considered to be the person who first makes use of the product.

Note: In situations where a person purchases this product for the purpose of gifting to another, the recipient is considered to be the original owner.

CONDITIONS:

The 2 Year Material and Workmanship Guarantee will be void and nullified in circumstances where:

- 1.The item is improperly assembled or adjusted and or not assembled strictly in accordance with the written instructions provided by the seller in the box containing the item.
- 2.There is damage to the product and that damage is deemed by Tasman Eco Pty Ltd to be caused by incorrect assembly, misuse or by use or storage outside of the physical or environmental specifications of the product.
- 3.There are modifications to the product or to parts of the product that were not authorized in writing by Tasman Eco Pty Ltd.
- 4.The item is transferred, gifted or disposed of by the original owner to another.

WARRANTY CLAIM PROCEDURE:

For warranty claims, please email us via our claims section on our website www.tasmaneco.com.au or visit the store where the product was purchased.

The product must be returned to Tasman Eco Pty Ltd or to the place of purchase with proof of purchase, including date and purchase price.

Tasman Eco Pty Ltd ABN. 58 106 988 578
4-6 Merryvale Rd , Minto , NSW 2566
PH: 02 9603 5000 FAX: 02 9603 7000
www.tasmaneco.com.au
Email: services@tasmaneco.com.au