 


tasman **ECO**

Assembly Instructions: *Willow Toy Box*

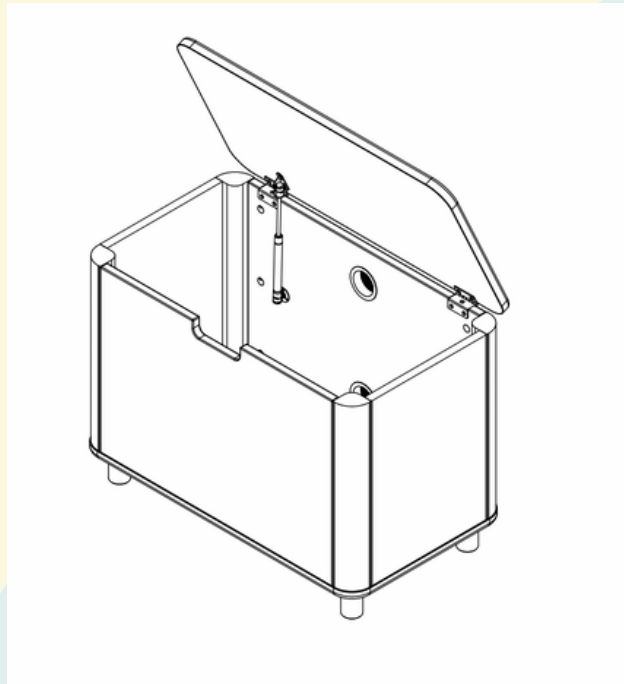

IMPORTANT

DO NOT OVER-TIGHTEN SCREWS.
Tighten all screws and connectors by hand,
not power tools.

Read all instructions before assembly and use of product.
Recommended that two people complete this assembly.
Save these instructions for future use.



tasman ECO

Safety Considerations - Child

- Follow manufacturer's assembly instructions in detail, ensuring safety features are not compromised.
- ENSURE THE TOY BOX IS NOT POSITIONED TOO CLOSE TO HEATERS, BLINDS, CURTAINS, WINDOWS OR POWERPOINTS.
- DO NOT KEEP ITEMS NEARBY WHERE THERE IS DANGER OF THE ITEM FALLING INTO THE TOY BOX.
- KEEP ANY MEDICATION, STRING, ELASTICS OR SMALL ITEMS OUT OF REACH. PREVENTING THE CHILD REACHING TO THE TOY BOX, WITH ANY SUFFOCATION OR STRANGLE RISKS.
- TO PREVENT FALLS, NO CHILD SHOULD BE ON TOP OF THE TOY BOX, ESPECIALLY WITHOUT SUPERVISION.
- BE CAREFUL NOT TO APPLY TOO MUCH WEIGHT AND/OR PRESSURE TO THE TOY BOX, ALSO BEWARE THAT YOUR CHILD IS NOT PLACED OR IN A SITUATION TO BE STUCK IN THE TOY BOX, IT SHOULD ONLY BE USED FOR STORAGE.

 
Cleaning and Care

- For general dusting wipe the cot with dry soft cloth
- To remove spills, dirt or anything your baby throws at you use warm soapy water
- Avoid using a scourer/steel wool, these damage the finish
- Always dry the product after cleaning


tasman ECO

Parts List


Top Panel + Rear Panel x 1

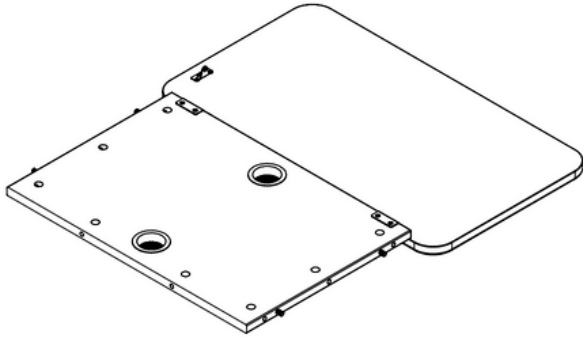


Front Panel x 1

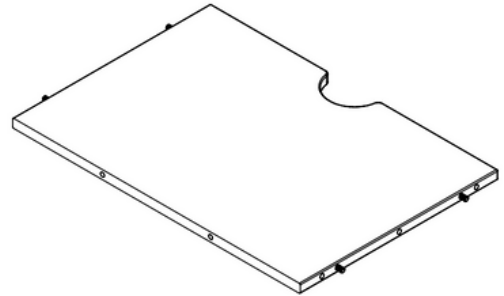 


Side Panels x 2

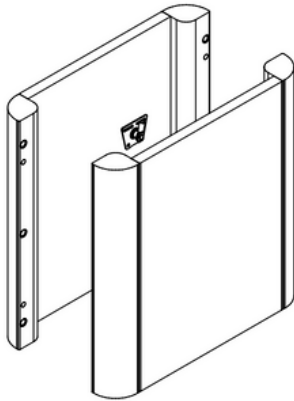 

Bottom Panel x 1

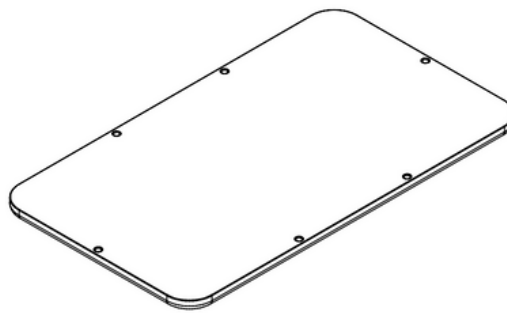 


Toy Box Legs x 4

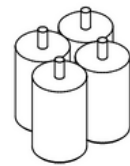 

Hardware List

 
Soft Close Strut x 1

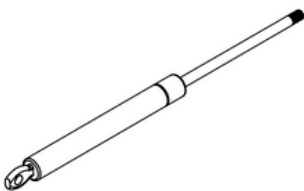

Strut Screw x 1



 Locking Pins x 18



Cam Locks x 18



Allen Key x 1



 
WARNING

Small parts can present as a choking hazard. Always keep small parts out of the way of children, during and after assembly. Store unused small parts in a safe place.

tasman ECO

Assembly

STEP 1: Screw 12 x locking pins into place on both of the side panels.

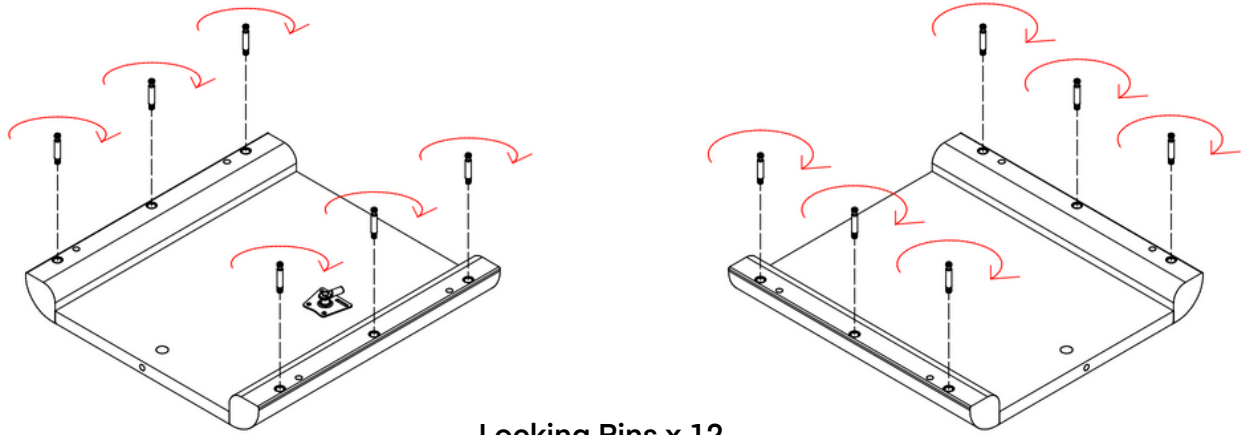


Locking Pins x 12





STEP 2: Screw the 4 x legs into the base by turning these clockwise.

 Turn the base over so it is standing on the legs and then screw in 6 x locking pins, using the images below as a reference.

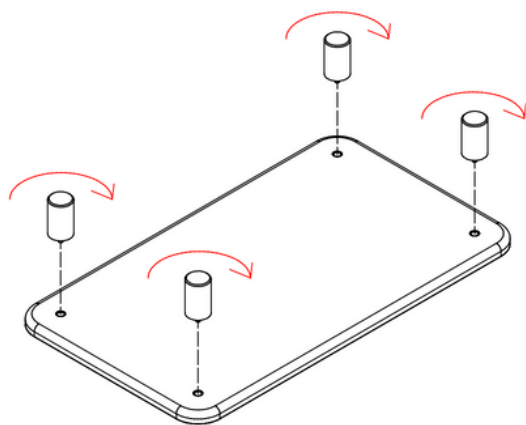


Locking Pins x 6

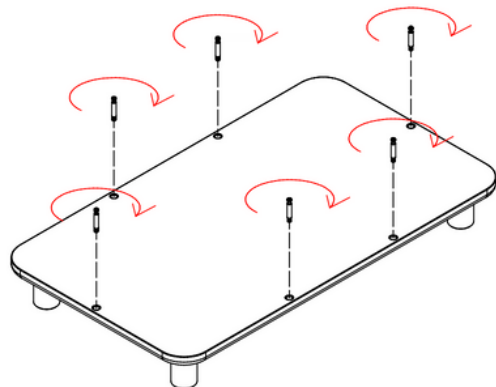  


tasman ECO

Assembly (continued...)

 STEP 3: Connect the front, rear and 1 x side panel, using the locking pins to connect them in place, then use your cam locks to lock them into place.



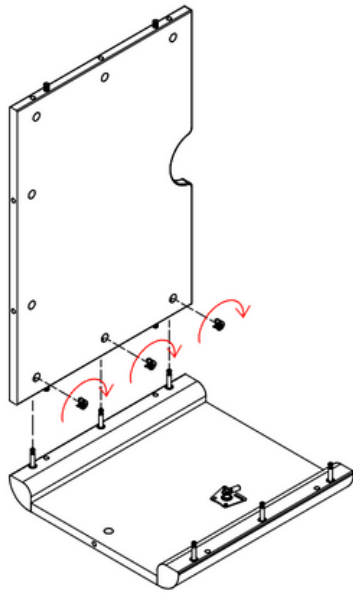


Cam Locks x 6

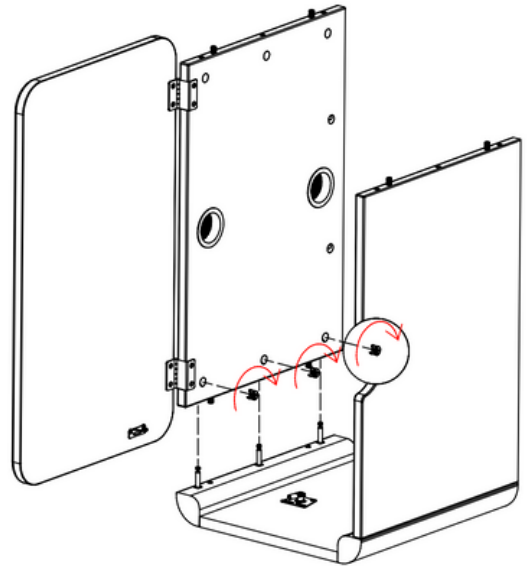 

STEP 4: Now, connect the other side panel to the front and rear panels, locking them into place using your cam locks.

   Cam Locks x 6

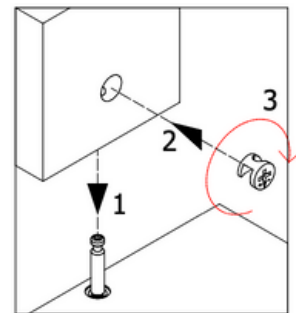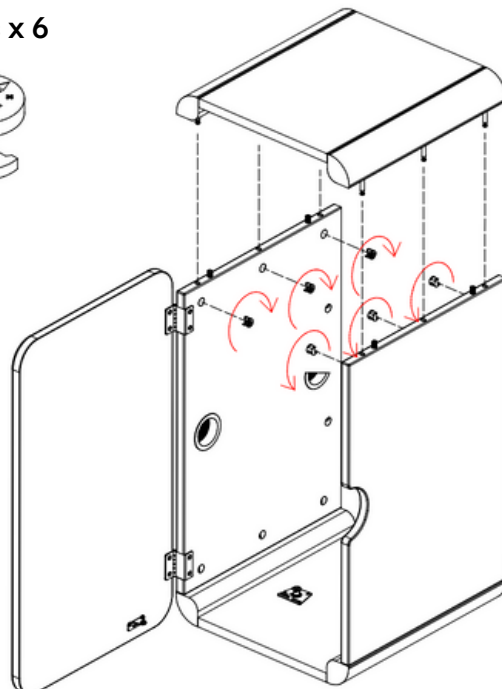



tasman ECO

Assembly (continued...)



STEP 5: Connect the toy box base to the already assembled toy box frame, lock this into place using your cam locks.

  Cam Locks x 6

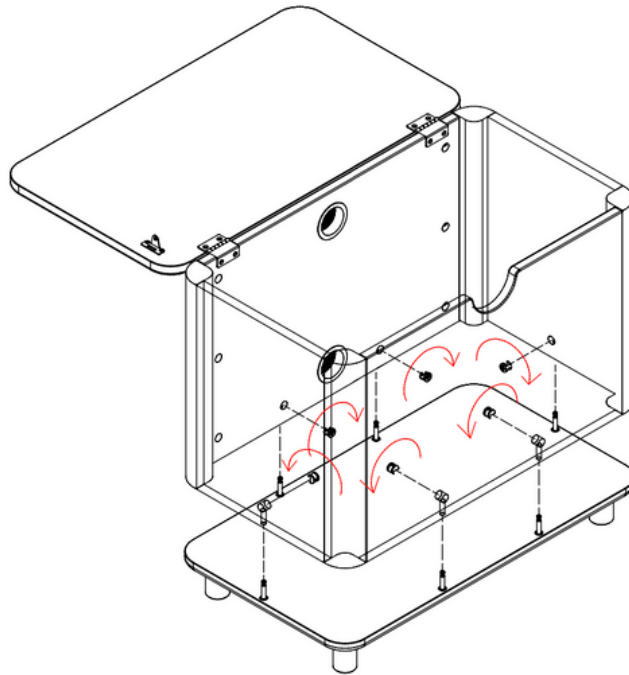


STEP 6: Screw in your soft close strut to your toy box, following the image below. Lock it into place using the strut screw, also pictured below.

  Soft Close Strut x 1

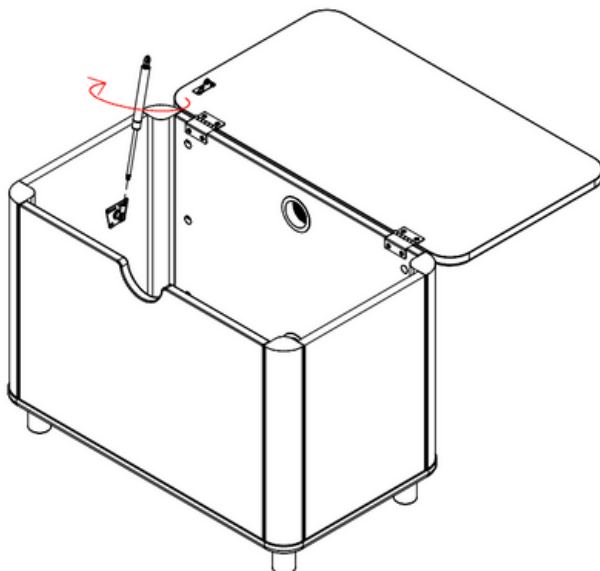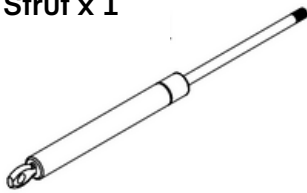

Strut Screw x 1

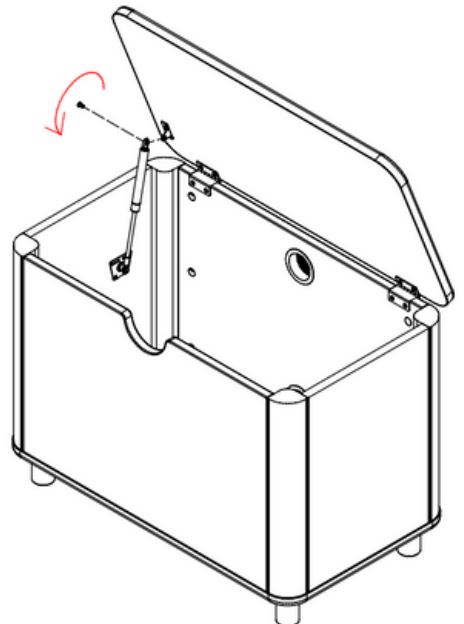 

tasman ECO

Product Guarantee

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation of any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

2 YEAR MATERIALS AND WORKMANSHIP GUARANTEE

If within 2 years of the date of purchase of this product, there is found any defect in materials or workmanship of this product, Tasman Eco Pty Ltd will replace the product free of charge, subject to the condition below:

The replacement product will be identical to the originally purchased product where possible, though in situations where the identical model is discontinued or out of stock, then Tasman Eco Pty Ltd will replace the product with a model that is functionally equivalent.

This guarantee is made to the purchaser and/or original owner only. For purposes of this guarantee, the original owner is considered to be the person who first makes use of the product.

Note: In situations where an individual purchases this product for the purpose of gifting to another, the recipient is considered to be the original owner.

CONDITIONS

The 2 year Material and Workmanship Guarantee will be void and nullified in circumstances where:

1. The item is improperly assembled or adjusted and/or not assembled strictly in accordance with the written instructions provided by the seller in the box containing the item.
2. There is damage to the product and that damage is deemed by Tasman Eco Pty Ltd to be caused by incorrect assembly, misuse or by use or storage outside of the physical or environmental specifications of the product.
3. There are modifications to the product or to parts of the product that were not authorised in writing by Tasman Eco Pty Ltd.
4. The item is transferred, gifted or disposed of by the original owner to another.

REGISTRATION AND CLAIM

To be eligible for the above guarantee, the original owner must register their details online at www.tasmaneco.com.au immediately upon receipt of the product. The product must be returned to Tasman Eco Pty Ltd or to the place of purchase with proof of purchase, including date and purchase price.