

tasman[®]

ESSENTIALS



Julian Chest with Change Tray

Assembly Instructions



Packaging and instructions
printed on recycled materials

Save these instructions for future reference

Assembly of this furniture is best undertaken by two people.


SJC brands

SJC Brands Pty Ltd abn. 58 106 988 578 w . www.tasmaneco.com.au


4-6 Merryvale Rd, Minto, NSW 2566 p.o. box 5878 Minto DC, NSW 2566

t. 02 9603 5000 f. 02 9603 7000 e. customer.service@sjcbrands.com.au

Parts Check list - Change Tray

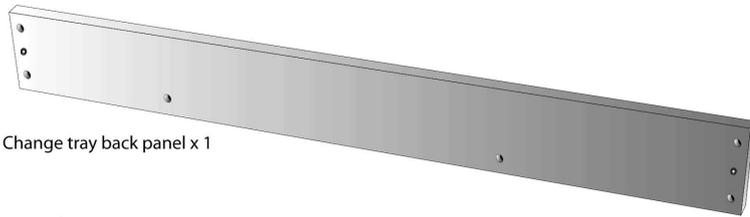

Change tray back panel x 1

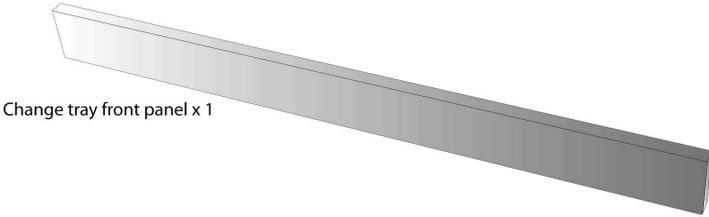

Change tray front panel x 1



Change tray side panels x 2



Locking cams x 4



Locking pins x 4




Self tapping screw x 2


Parts Checklist - Drawers x 3



Drawer front panel x 3



Drawer side panel 3 x left
Drawer side panel 3 x right

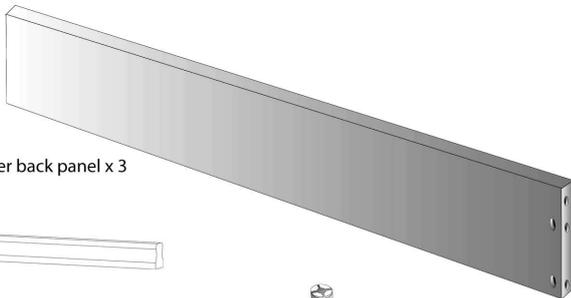

Drawer back panel x 3



Drawer runner 3 x left
Drawer runner 3 x right



Drawer handle x 3




Drawer runner screw
x 18 x 24



Drawer locking pin x 24




Drawer handle screw x 6

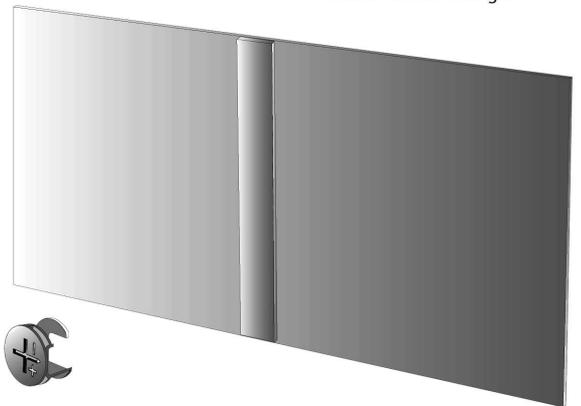

Drawer cam lock x 24

Drawer base x 3

Parts Checklist - Chest case

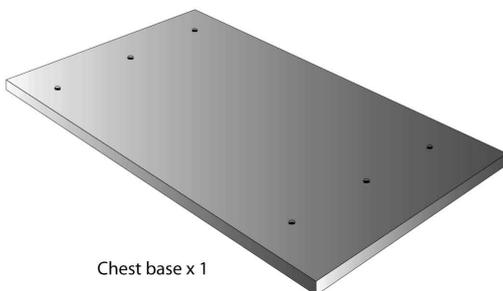

Chest base x 1



Chest top x 1



Back panels support x 1



Chest side panels x 2



Chest back panels x 2



Chest locking pin x 2



Chest cam locks x 2



Chest bolts x 8




Chest dowels x 34

Section 1 - Assemble Change Tray

1 Fit locking pins to front and back panels


Lay the front and back panels face down on the floor and screw in x 4 locking pins
Tighten all locking pins firmly with a screwdriver

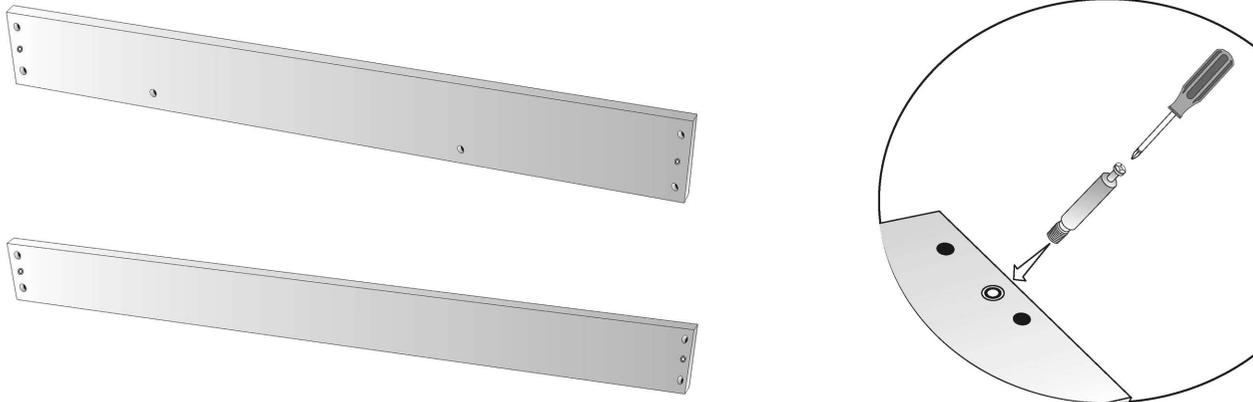


2 Fit locking cams to side panels.

Insert 2 x locking cams into each side panel. Use a screwdriver to rotate the locking cams so the pointed end of the cross on the cam points in the direction locking pins will insert from.

Note the pointed end of the cross on the cam locks must point in the direction the locking pins will insert from

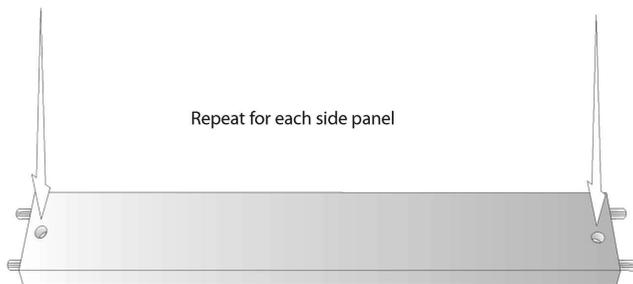


Use a screwdriver to rotate cam into correct alignment.

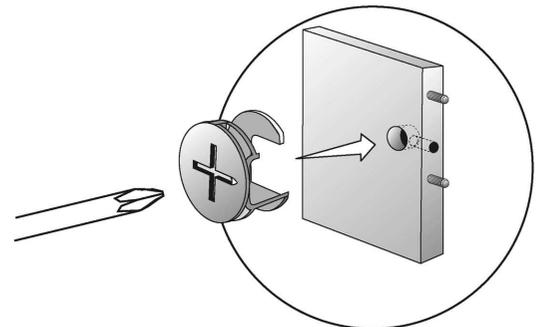

3 Fit x 2 side panels to back panel


Align and insert the dowels and locking pins on the side panel and back panel and tighten the cam locks with a screwdriver

Repeat so both side panels are attached to the back panel

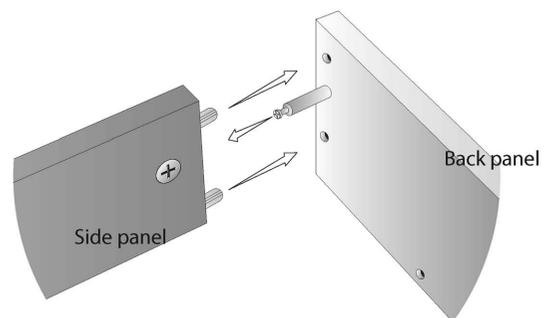

4 Fit front panel to side and back panel

Align and insert the locking pins and dowels on front panel and side panels and tighten the cam locks with a screwdriver

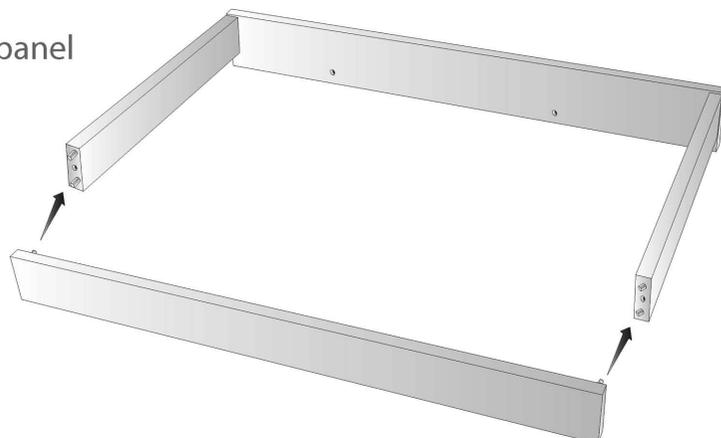


5 The Change Tray is completed

Section 2 - Assemble Drawers

1 Fit locking pins to front and side panels x 2

Lay the front and side panels face down on the floor and screw 2 x locking pins into the threaded holes on each side panel and screw 4 x locking pins into the threaded holes on front panel (2 at each end of the front panel)


Tighten firmly but do not overtighten

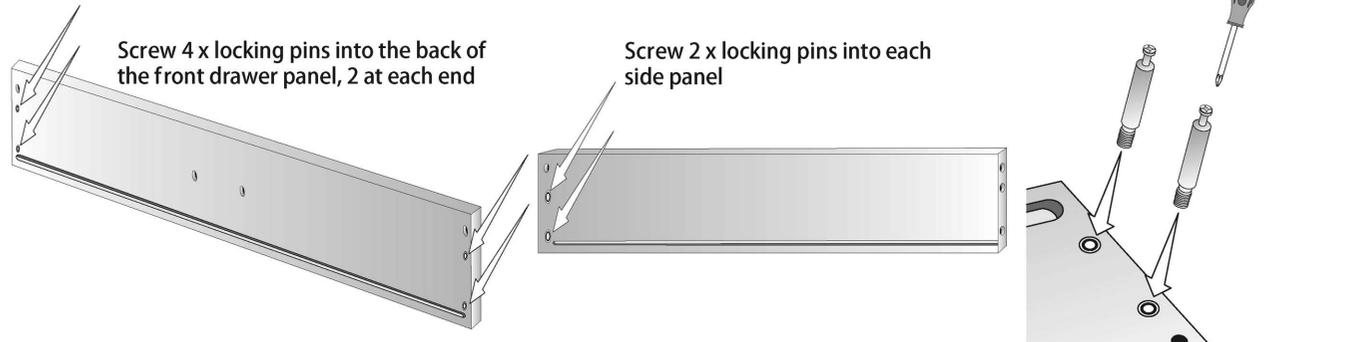

2 Fit locking cams to back panel and side panels x 2

Lay the back and side panels on the floor with the large holes facing upwards
Insert 4 x cam locks into the back panel and 2 x cam locks into each side panel

Note: the pointed end of the cross on the cam locks must point in the direction the locking pins will be inserted from

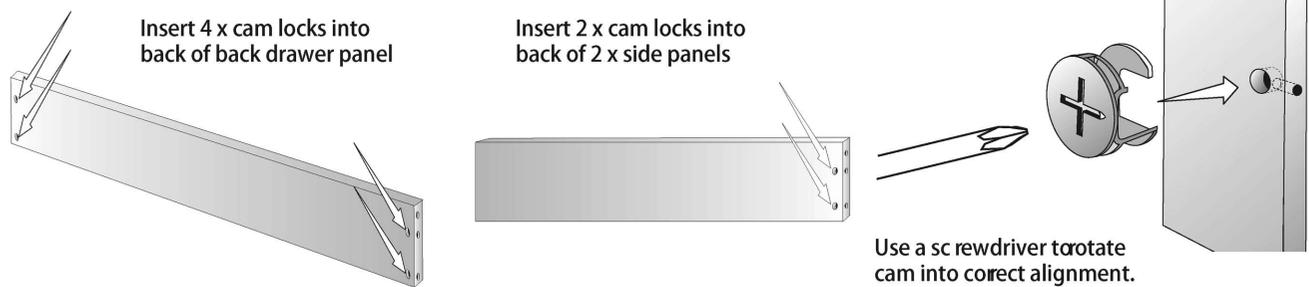


3 Fit 2 side panels to back panel

Insert 1 x dowel into hole above the 2 x locking pins on the side panels
Align and insert the dowel and locking pins on the side panel to the back panel and tighten the cam locks.


Repeat so both side panels are attached to the back panel

Note: Check that the grooves for the drawer base are facing inwards

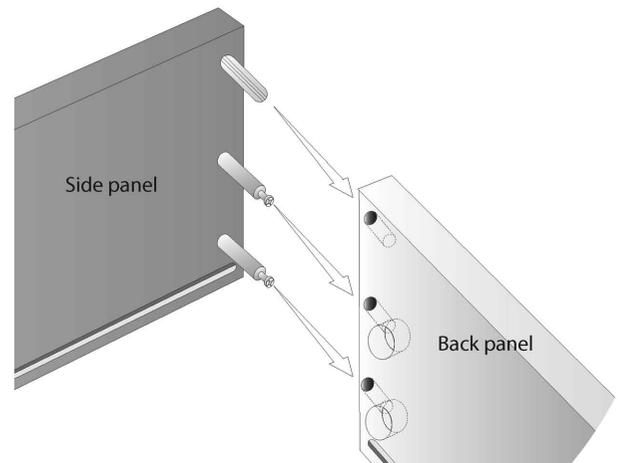

4 Fit the drawer base


Place the assembled drawer on the floor and insert the base into the grooves in the side panels. The reinforcing strip faces downward

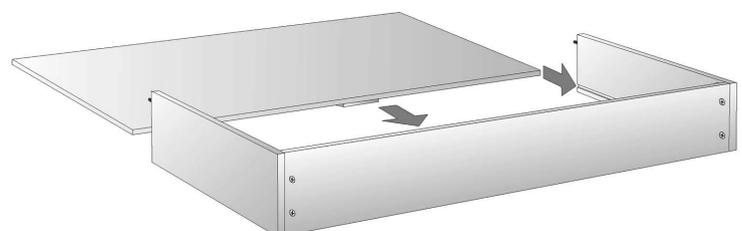

5 Fit the Front Panel


Stand the assembled drawer upright, align the drawer front, dowels and locking pins with corresponding holes and attach drawer front.

Tighten all cam locks

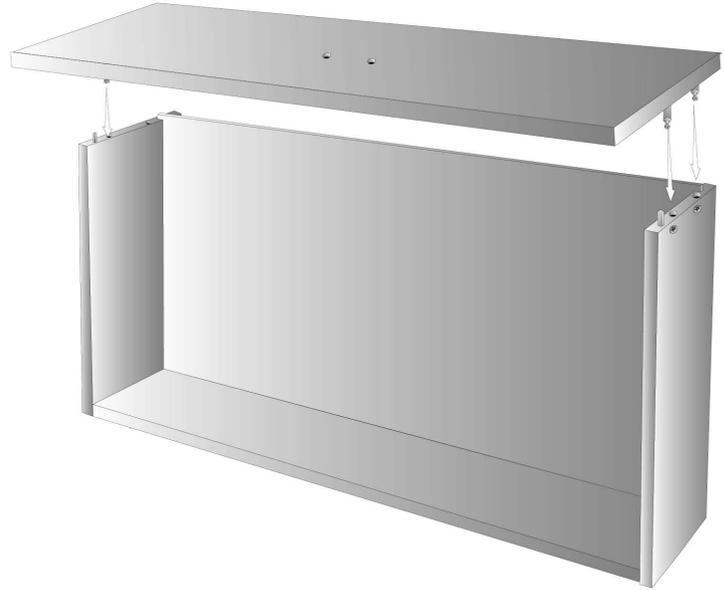

6 Fit Drawer handle

Place drawer handle in position over the two holes in the front drawer panel and insert 2 x drawer screws through the back of the drawer front and into drawer handle and tighten

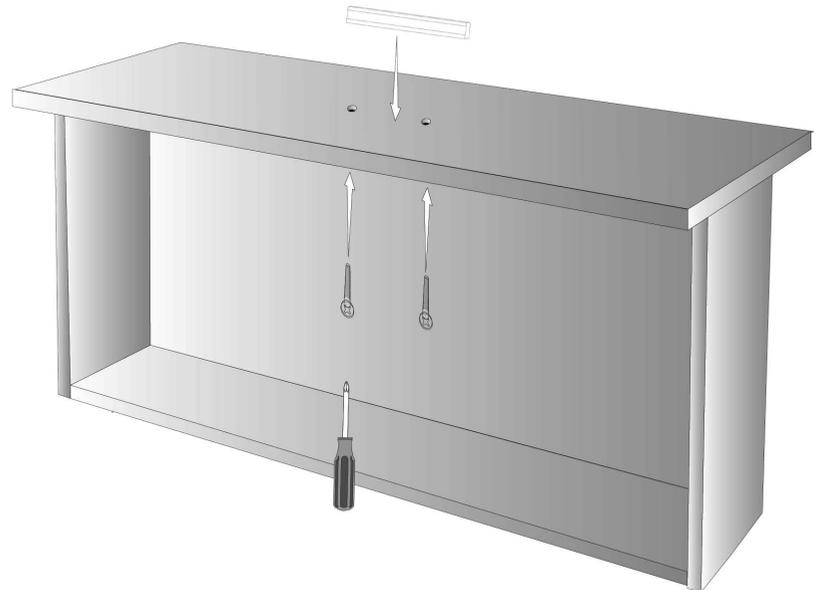


6 Fit Drawer runners

Turn the drawer upside down on the floor

Place drawer runner in position - with the wheel on the runner at the back of the drawer. and pushing the drawer runner up against the drawer front panel

Note: there are left and right drawer runners.

Screw 3 x self tapping screws through runner into side panel

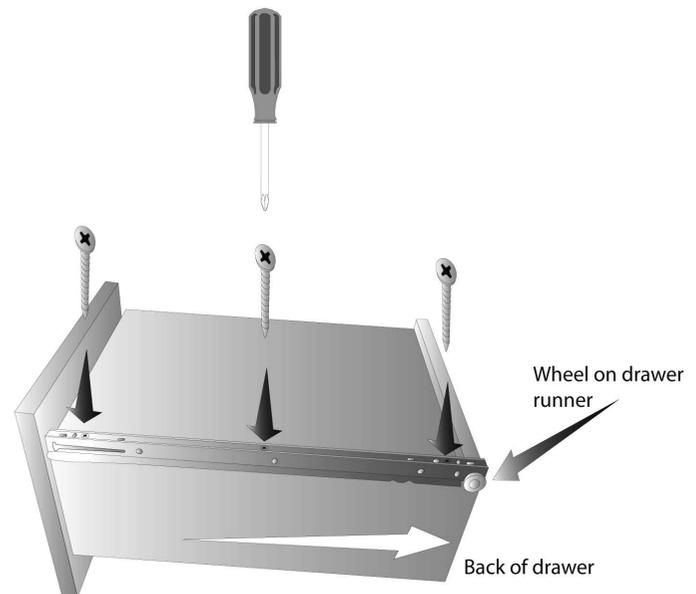



6 The Drawer is complete - repeat for all drawers

Section 3 - Assemble Drawer Case

1 Fit locking pins to side panels and dowels to base

Turn the base the correct way up and insert 8 x wooden dowels

Lay side panels outside facing down and insert 1 x locking pin and one x dowel into each side panel

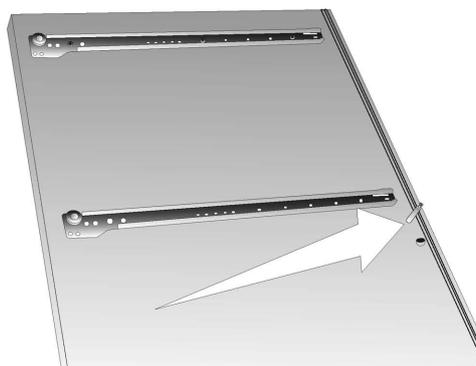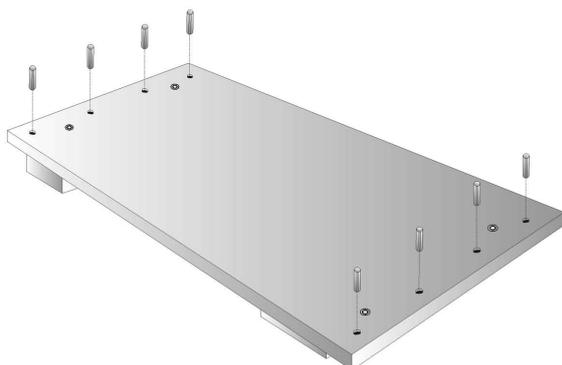


2 Fit back panel support and lower back panel to side panels

Stand one side panel up on its back edge, attach the back panel support and tighten the cam lock.

While supporting the first side panel repeat and attach the second side panel to the back panel support

Slide a back panel into the grooves on the side panels and into the groove in the back panel support


Note: the pointed end of the cross on the cam locks must point in the direction the locking pins will be inserted from

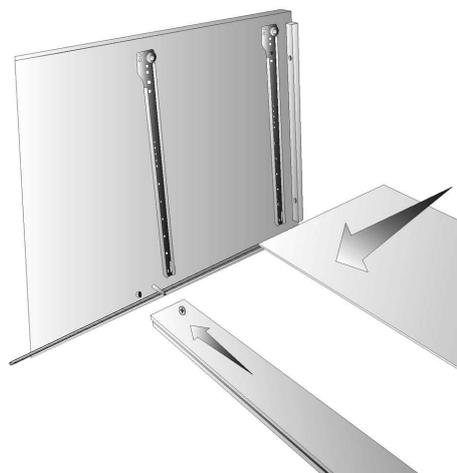

3 Fit base to side panels

While the side panels remain supported attach the base aligning the dowels in the base with the holes in the end of the side panels and the back panel with the groove in the base

Insert 4 x 30 mm bolts (2 on each side) through the holes in the square bars attached to the side panel and into the threaded nuts in the base and tighten

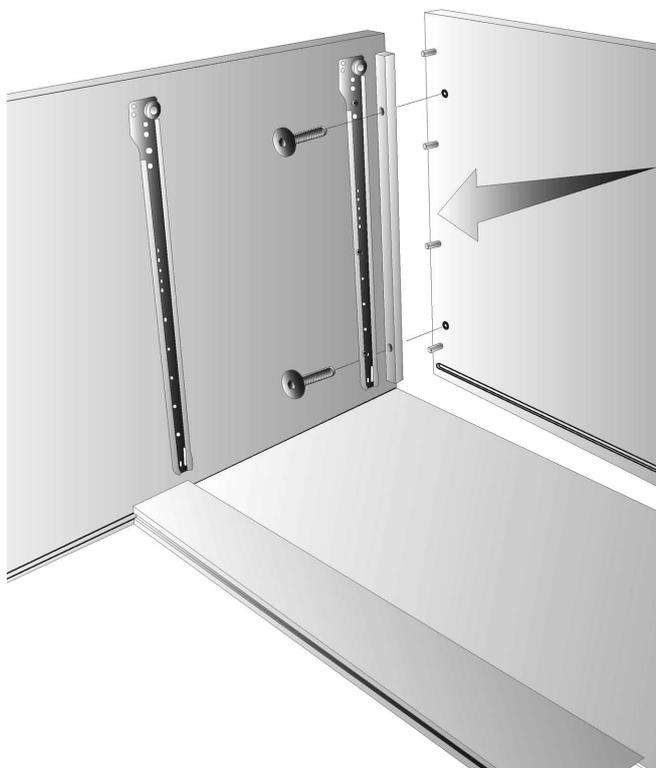

4

Fit upper back panel and top to base and side panels


Stand the case upright carefully

Insert the top back panel into the grooves on the side panels and the back panel support.

Insert 4 x dowels into holes on the top of each side panel

Place top onto case aligning holes in top with dowels

Insert 2 x 30 mm bolts through holes in supports on each side panel and into top and tighten with an allen key

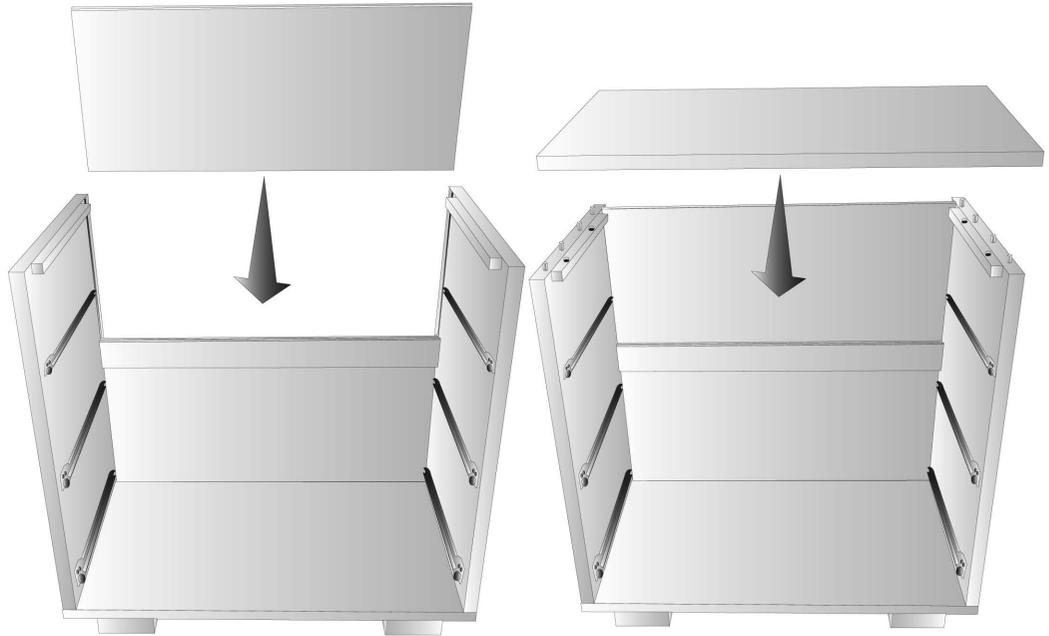

5

The Case is completed - Insert the drawers and attach the change tray

Check all cam locks and bolts are tight

Insert the drawers carefully onto their runners



6

The Julian chest is completed


7 Attach chest top changer to chest of drawers

Place chest top changer onto the Sonata drawer chest

Align carefully so chest top changer is in the center of the chest

Insert x 2 self tapping screws through holes in chest top changer and using a screwdriver screw into the back of the chest of drawers.

The Julian chest top changer fits a change mattress 80 cm x 42 cm +/- 2 cm

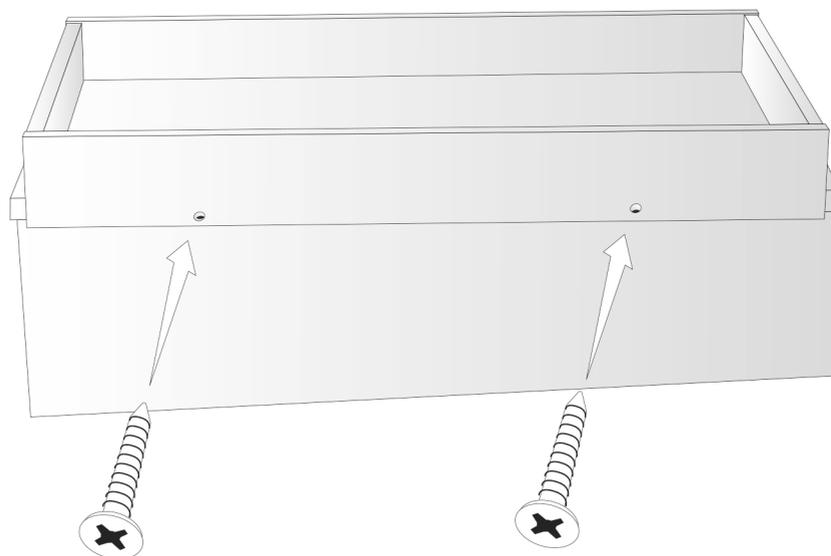

8 The Julian chest and change tray is completed.



Instruction For Wall Strap Installation

Hardware List


A. 2 x Self tapping screw



B. 1x Wall strap




Step 1 - Screw Wall Strap to back of the chest with Self tapping screw(Supplied)

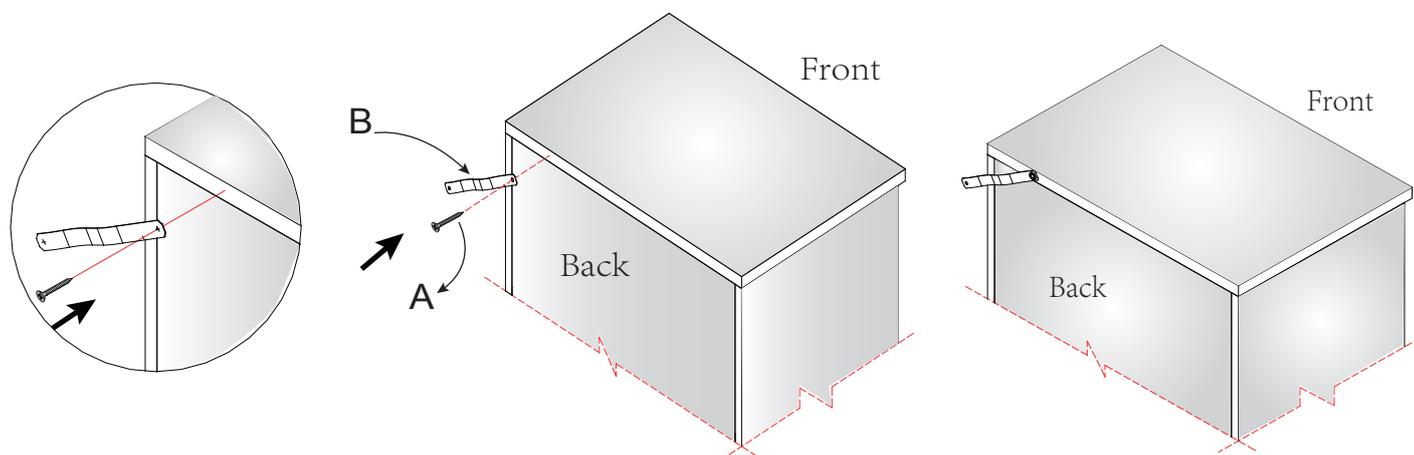


Step 2 - Position the strap 100mm the left of its intended final position in order to give you room the screw the wall strap into the wall.


Please note: The wall fixing is not supplied, Please seek advice from your local hardware supplier to ensure you purchase the correct wall fixing.

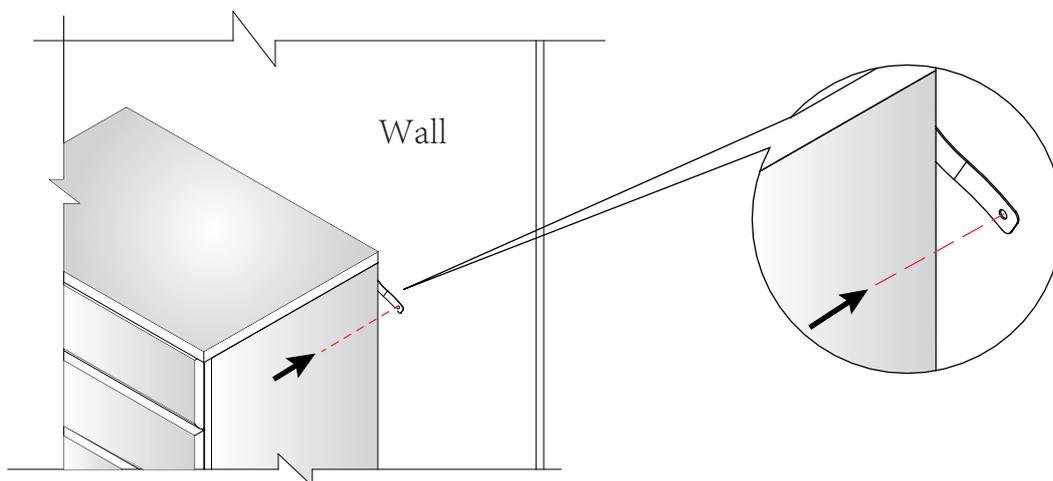


Step 3 - Ensure the wall strap is fixed into the wall securely.

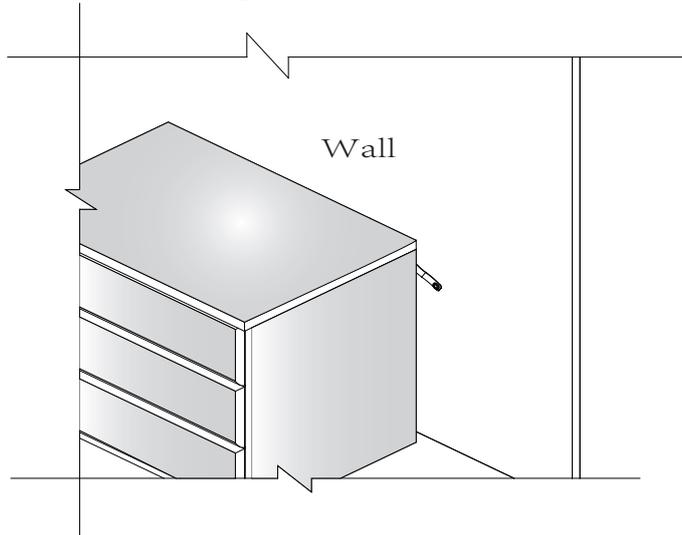

Step 4 - Once you have completed step 3 then reposition the chest in its intended position (Two people maybe required for this step):

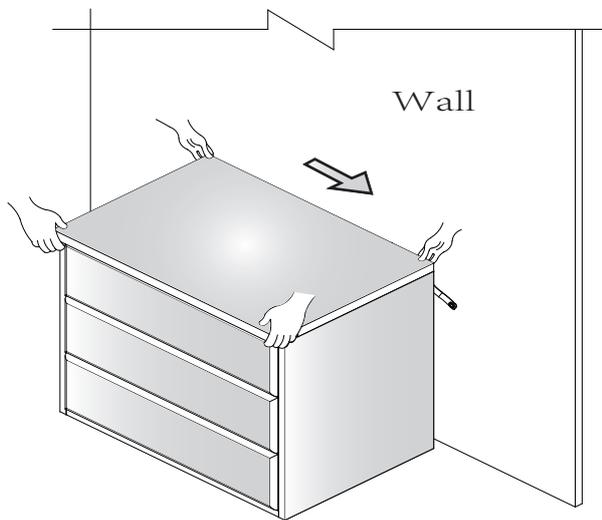

Step 5 - The stallation of your wall strap is now completed

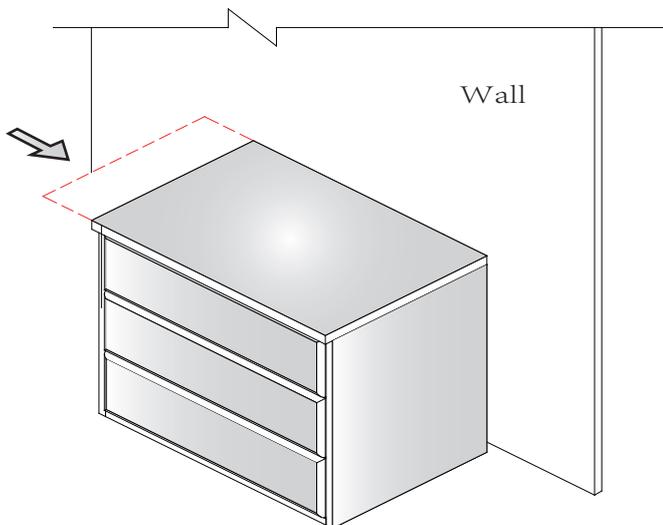

Packaging and instructions
printed on recycled materials

Save this instruction for future reference.

SJC brands

SJC Brands Pty Ltd abn. 58 106 988 578

4 Merryvale Road, Minto, NSW 2566 p.o. box 5878 Minto DC, NSW 2566

t. 02 9603 5000 f. 02 9603 7000 e. customer.service@sjcbrands.com.au w. www.tasmaneco.com.au



Guarantee & Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The guarantee described below is in addition to the guarantee provided by law.

2 Year Materials and Workmanship Guarantee

If within 2 years of the date of purchase of this product, there is found any defect in materials or workmanship of this product, SJC Brands Pty Ltd, will replace the product free of charge, subject to the conditions below. The replacement product will be identical to the originally purchased product wherever possible, though in situations where the identical model is discontinued or out of stock, then SJC Brands Pty Ltd will replace the product with a model that is functionally equivalent.

This Guarantee is made to the purchaser and/or original owner only. For purposes of this Guarantee, the original owner is considered to be the person who first makes use of the product. Note: In situations where a person purchases this product for the purpose of gifting to another, the recipient is considered to be the original owner.

Conditions.

The '2 Year Materials and Workmanship Guarantee & Warranty will be void and nullified in circumstances where:

1. The item is improperly assembled or adjusted and or not assembled strictly in accordance with the written instructions provided by the seller in the box containing the item.
2. There is damage to the product and that damage is deemed by SJC Brands Pty Ltd to be caused by incorrect assembly, misuse or by use or storage outside of the physical or environmental specifications of the product.
3. There are modifications to the product or to parts of the product that were not authorised in writing by SJC Brands Pty Ltd.
4. The item is transferred, gifted or disposed of by the original owner to another.

WARRANTY CLAIM PROCEDURE:

For warranty claims, please email us via our claims section on our website www.tasmaneco.com.au or visit the store where the product was purchased.

The product must be returned to SJC Brands Pty Ltd or to the place of purchase with proof of purchase, including date and purchase price.

SJC Brands Pty Ltd ABN:58 106 988 578

PH: 02 9603 5000 FAX: 02 9603 7000

Add: 4-6 Merryvale Rd, Minto NSW 2566

Email: customer.service@sjcbrands.com.au

